



356400

Illustrated Parts List

Model Series

356400

AIR COOLED

TYPE NUMBERS

0001 to 0203, 0206, 0207, 0208, 0213, 0214, 0215 to 0219, 0220, 0224, 0229, 0243, 0247, 0248,
0257, 0259, 0263, 0264, 0266, 0270, 0280, 0283, 0286, 0287, 0288, 0290, 0292, 0295, 0299,
0303, to 0312, 0298, 0316, 0317, 0319, 0322, 0326, 0331, 0345, 0346, 0348, 0354, 0360, 0361,
0362, 0363, 0364, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0378, 0384, 0389, 0395, 0398,
0402, 0404, 0405, 0565, 0600, 0601, 0606, 0607, 0609, 1154, 1270, 1279, 1415, 3077, 3079,
3087, 3248, 3285.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

1036 EMISSIONS LABEL



 




 
 


1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL




1319 WARNING LABEL

WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.



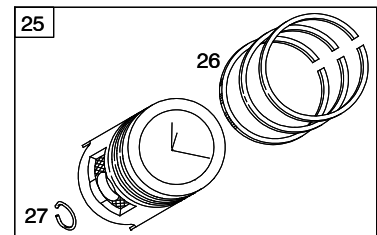
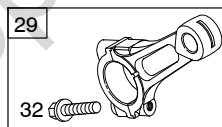

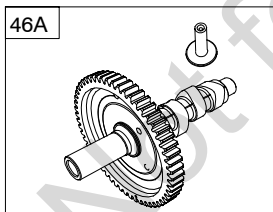
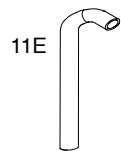
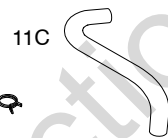
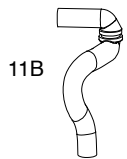


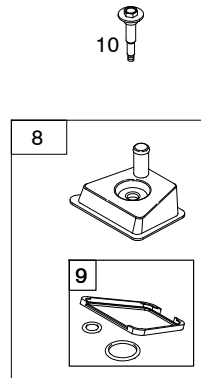
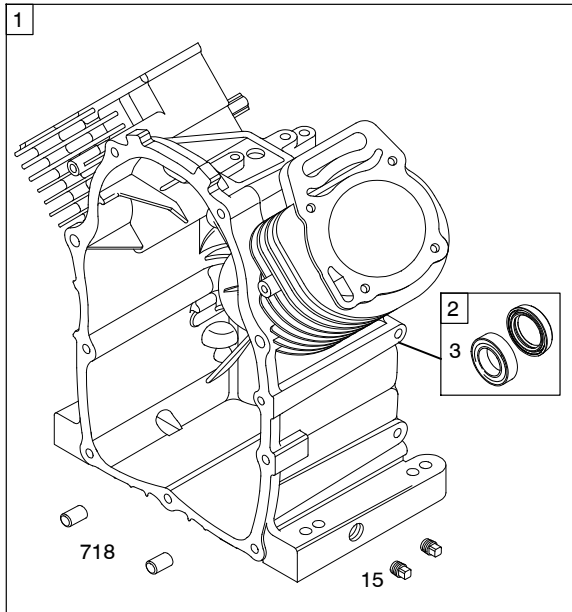






USED AFTER DATE CODE: 07062900


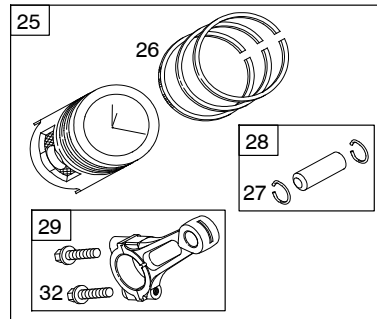
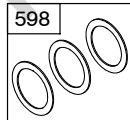
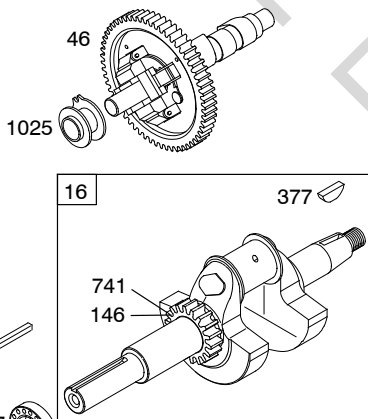






USED BEFORE DATE CODE: 07063000




  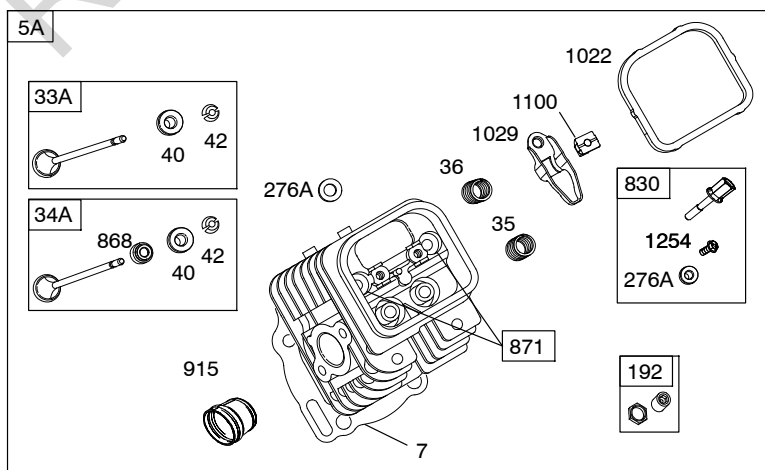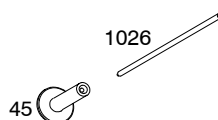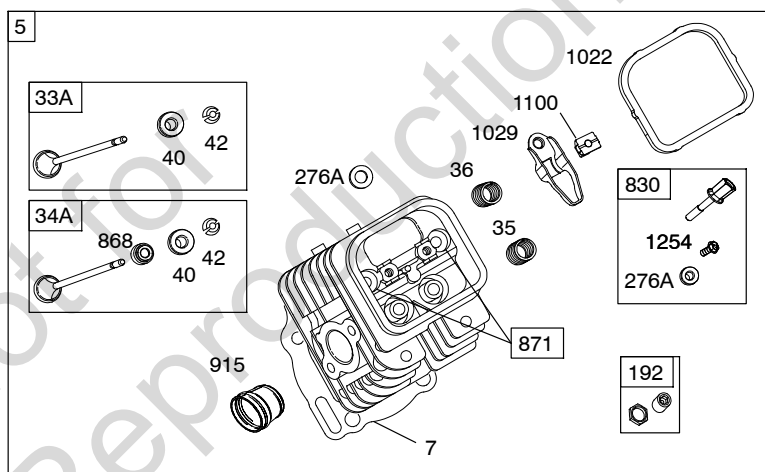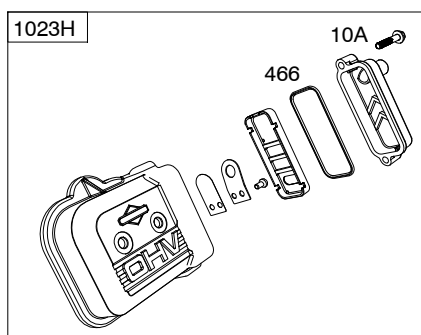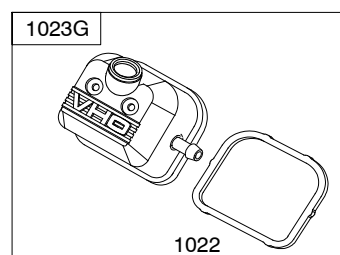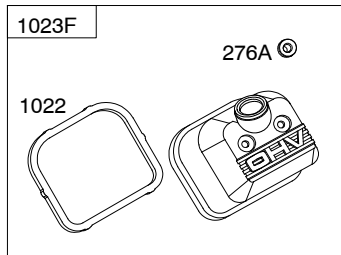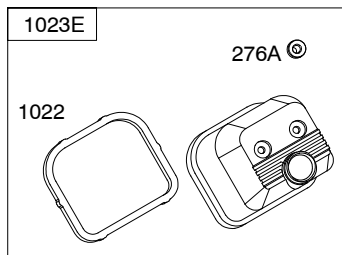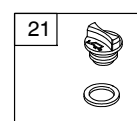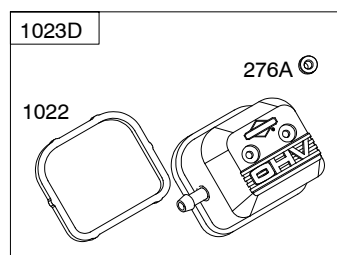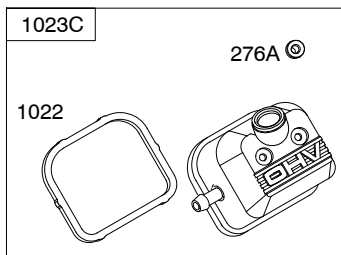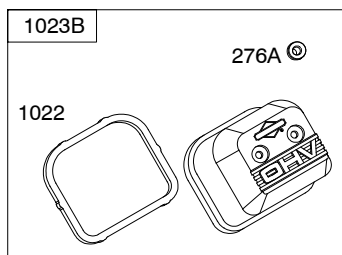

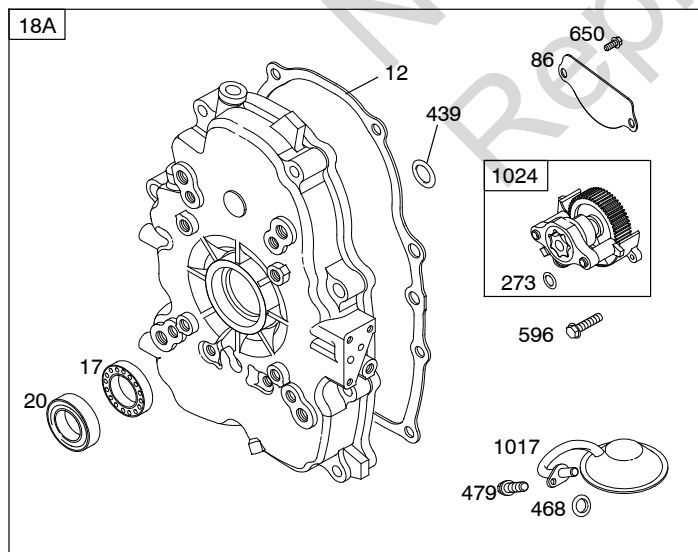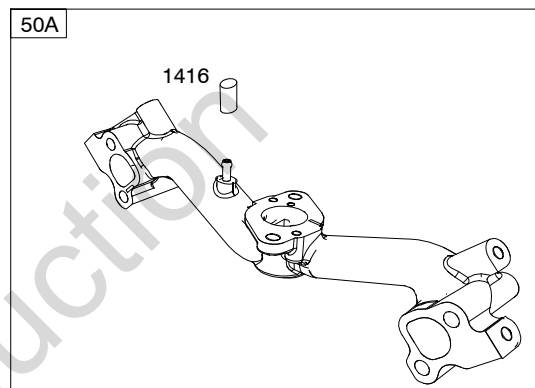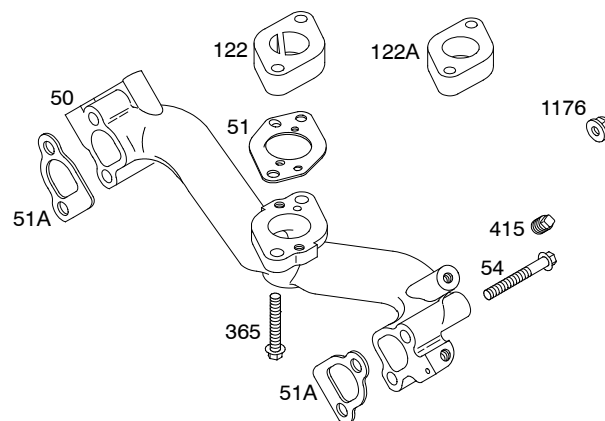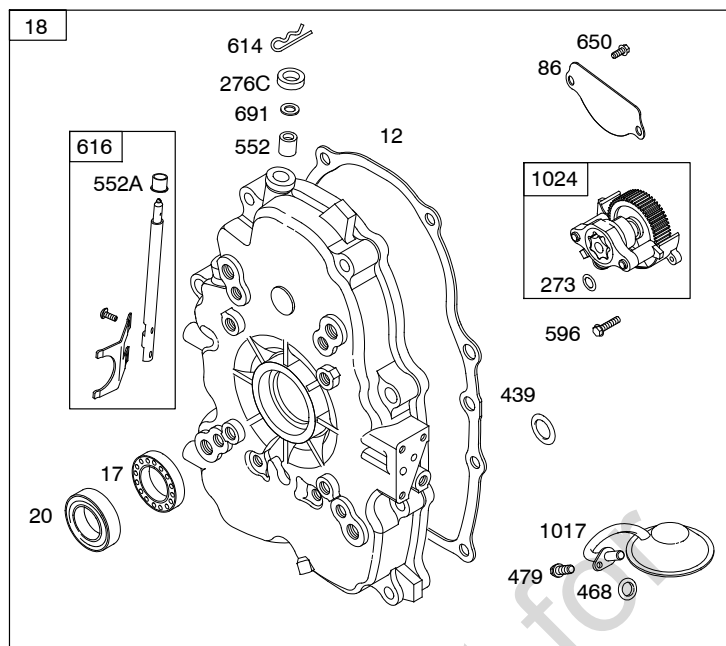


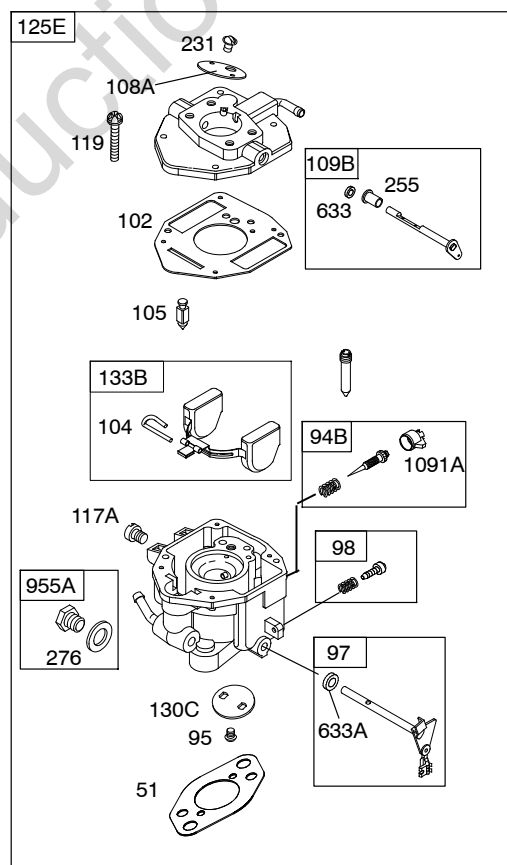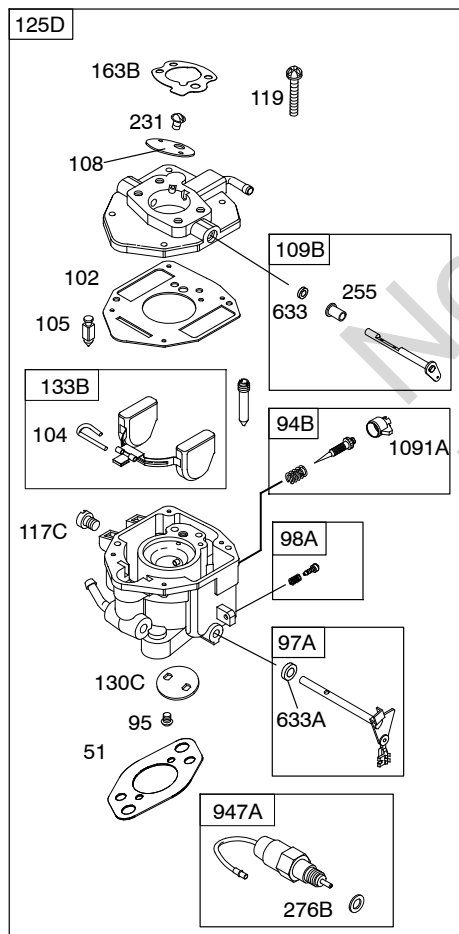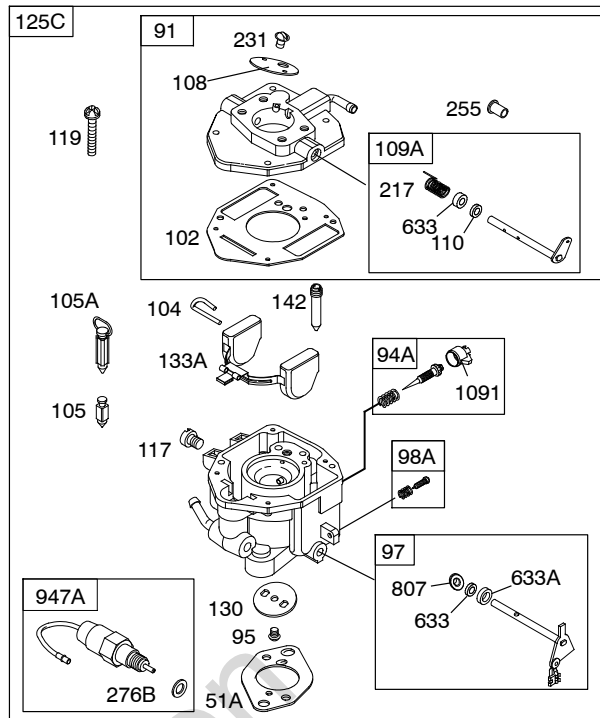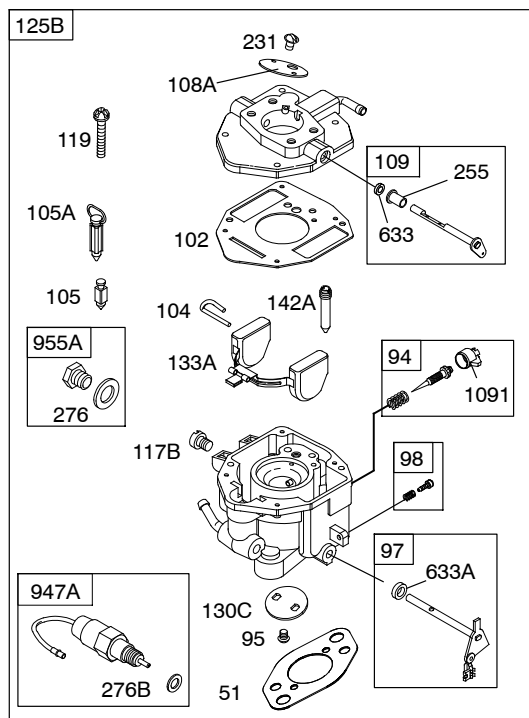

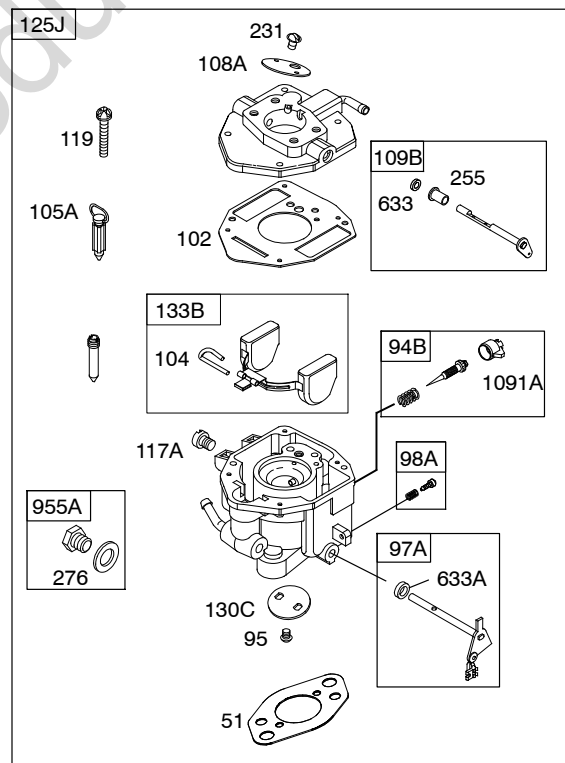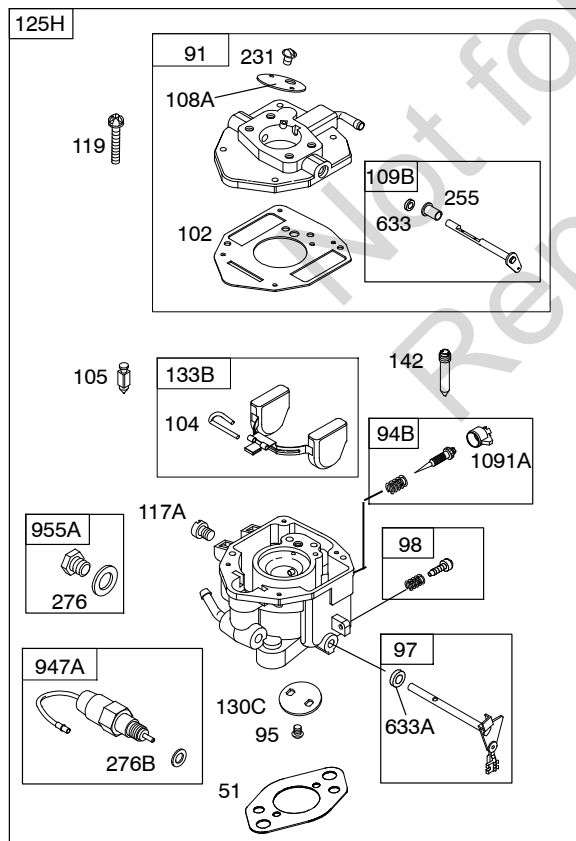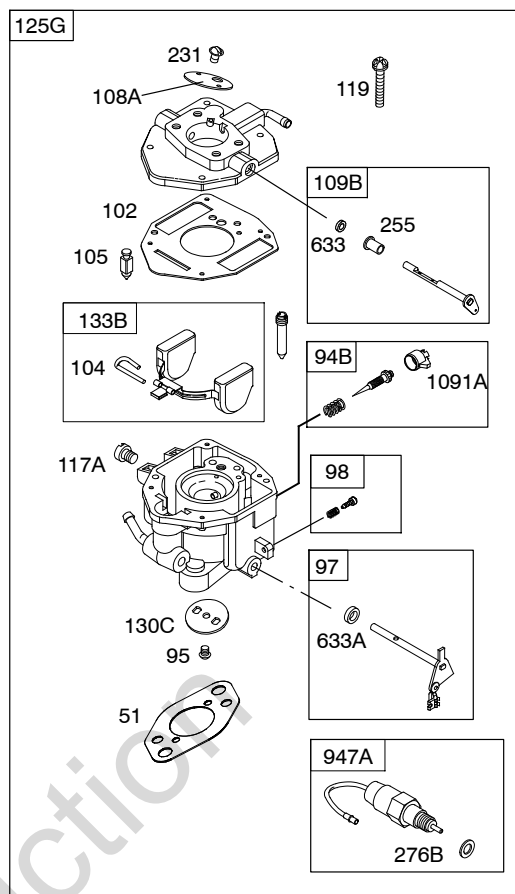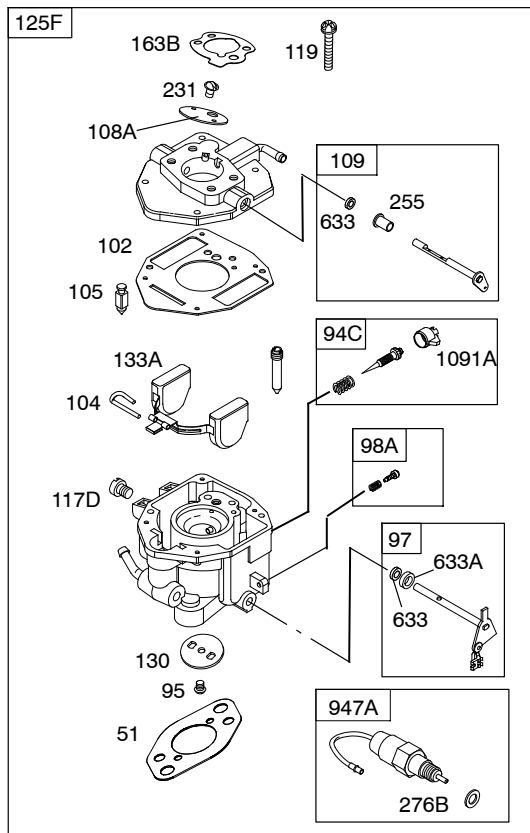


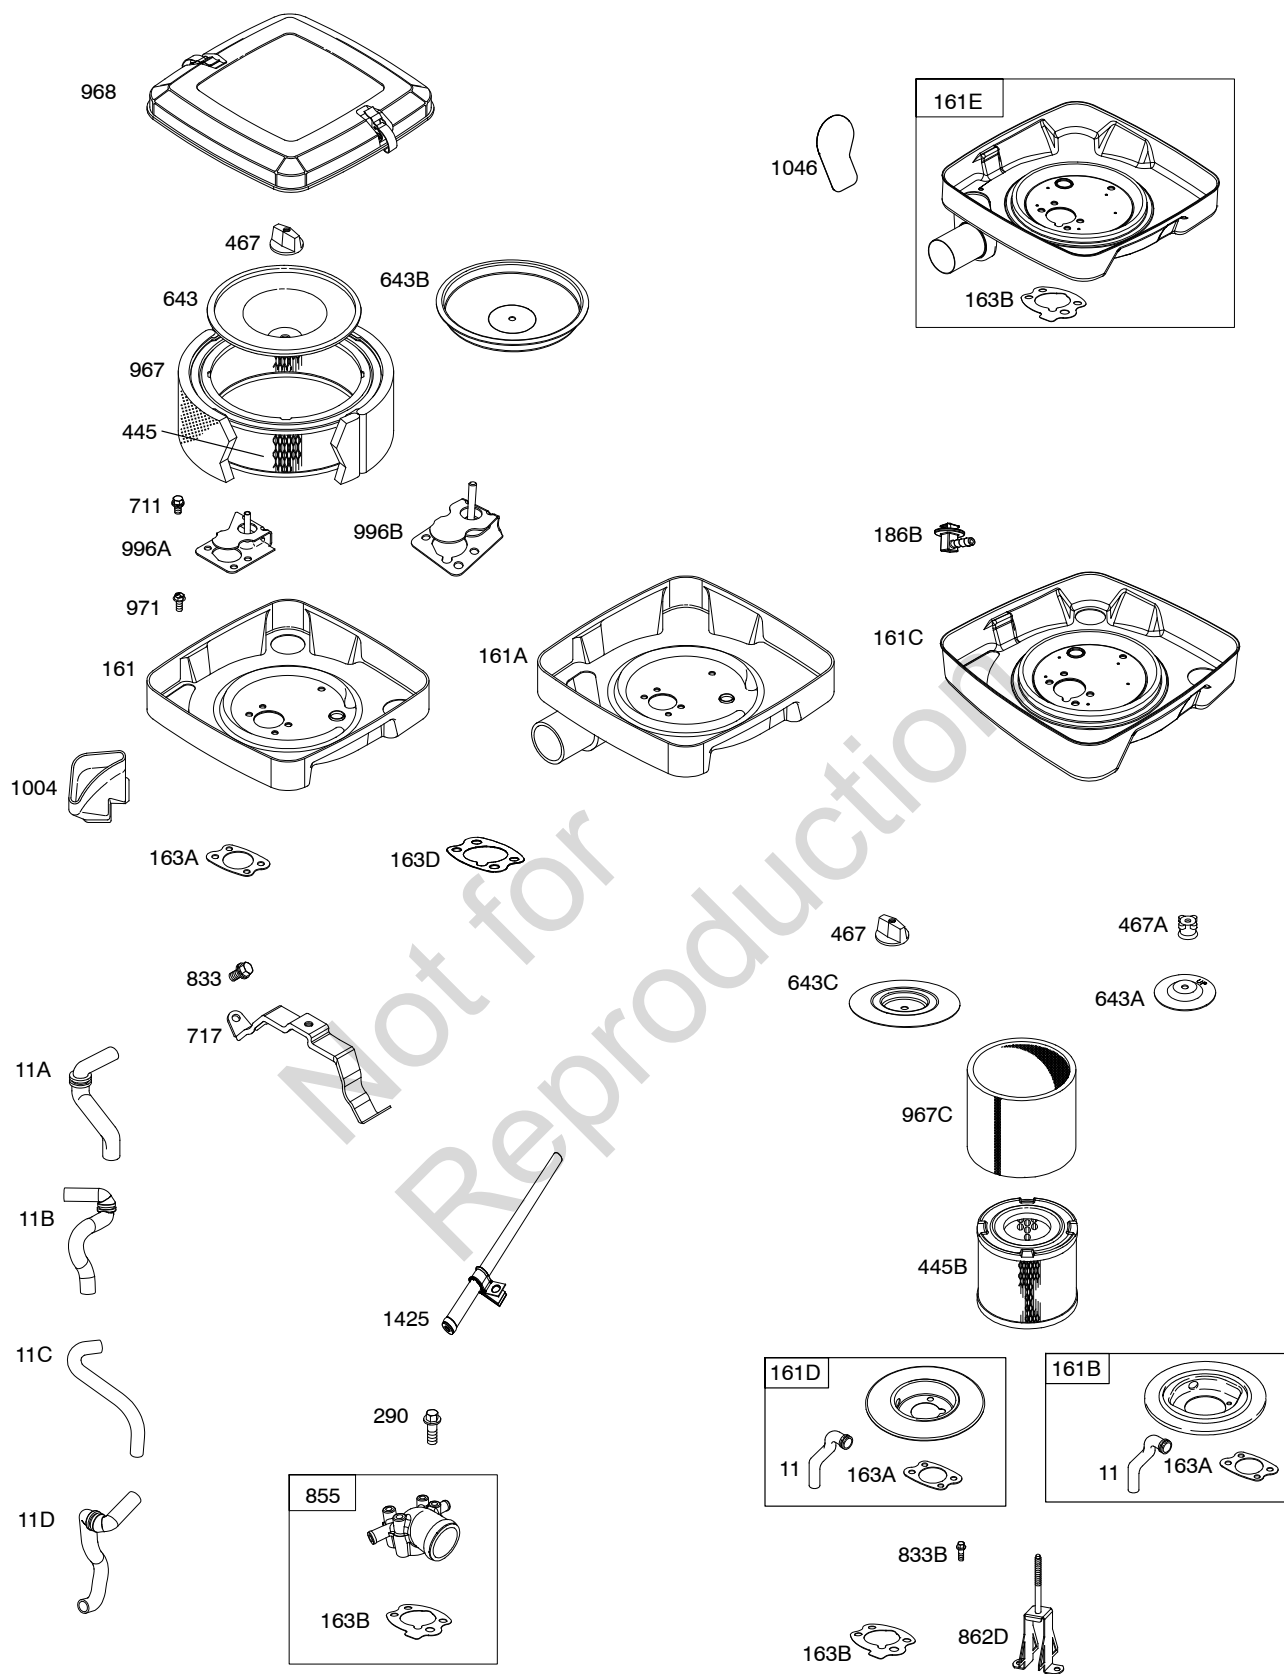





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-7 Assemblies include all parts shown in frames. 11/30/2012

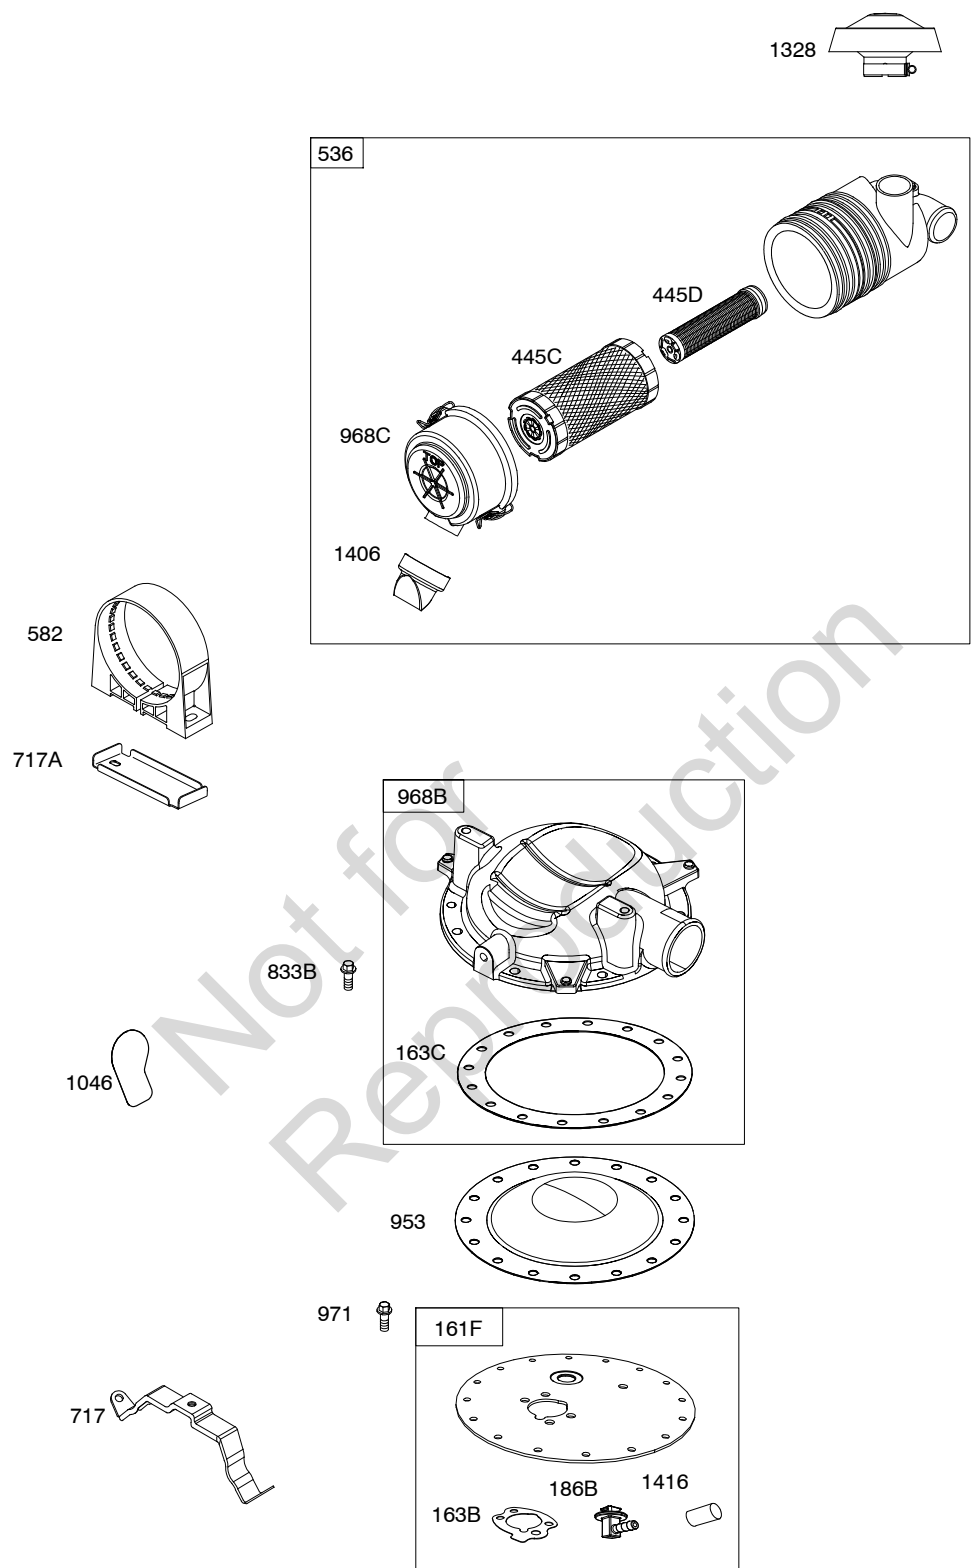



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-8 Assemblies include all parts shown in frames. 11/30/2012











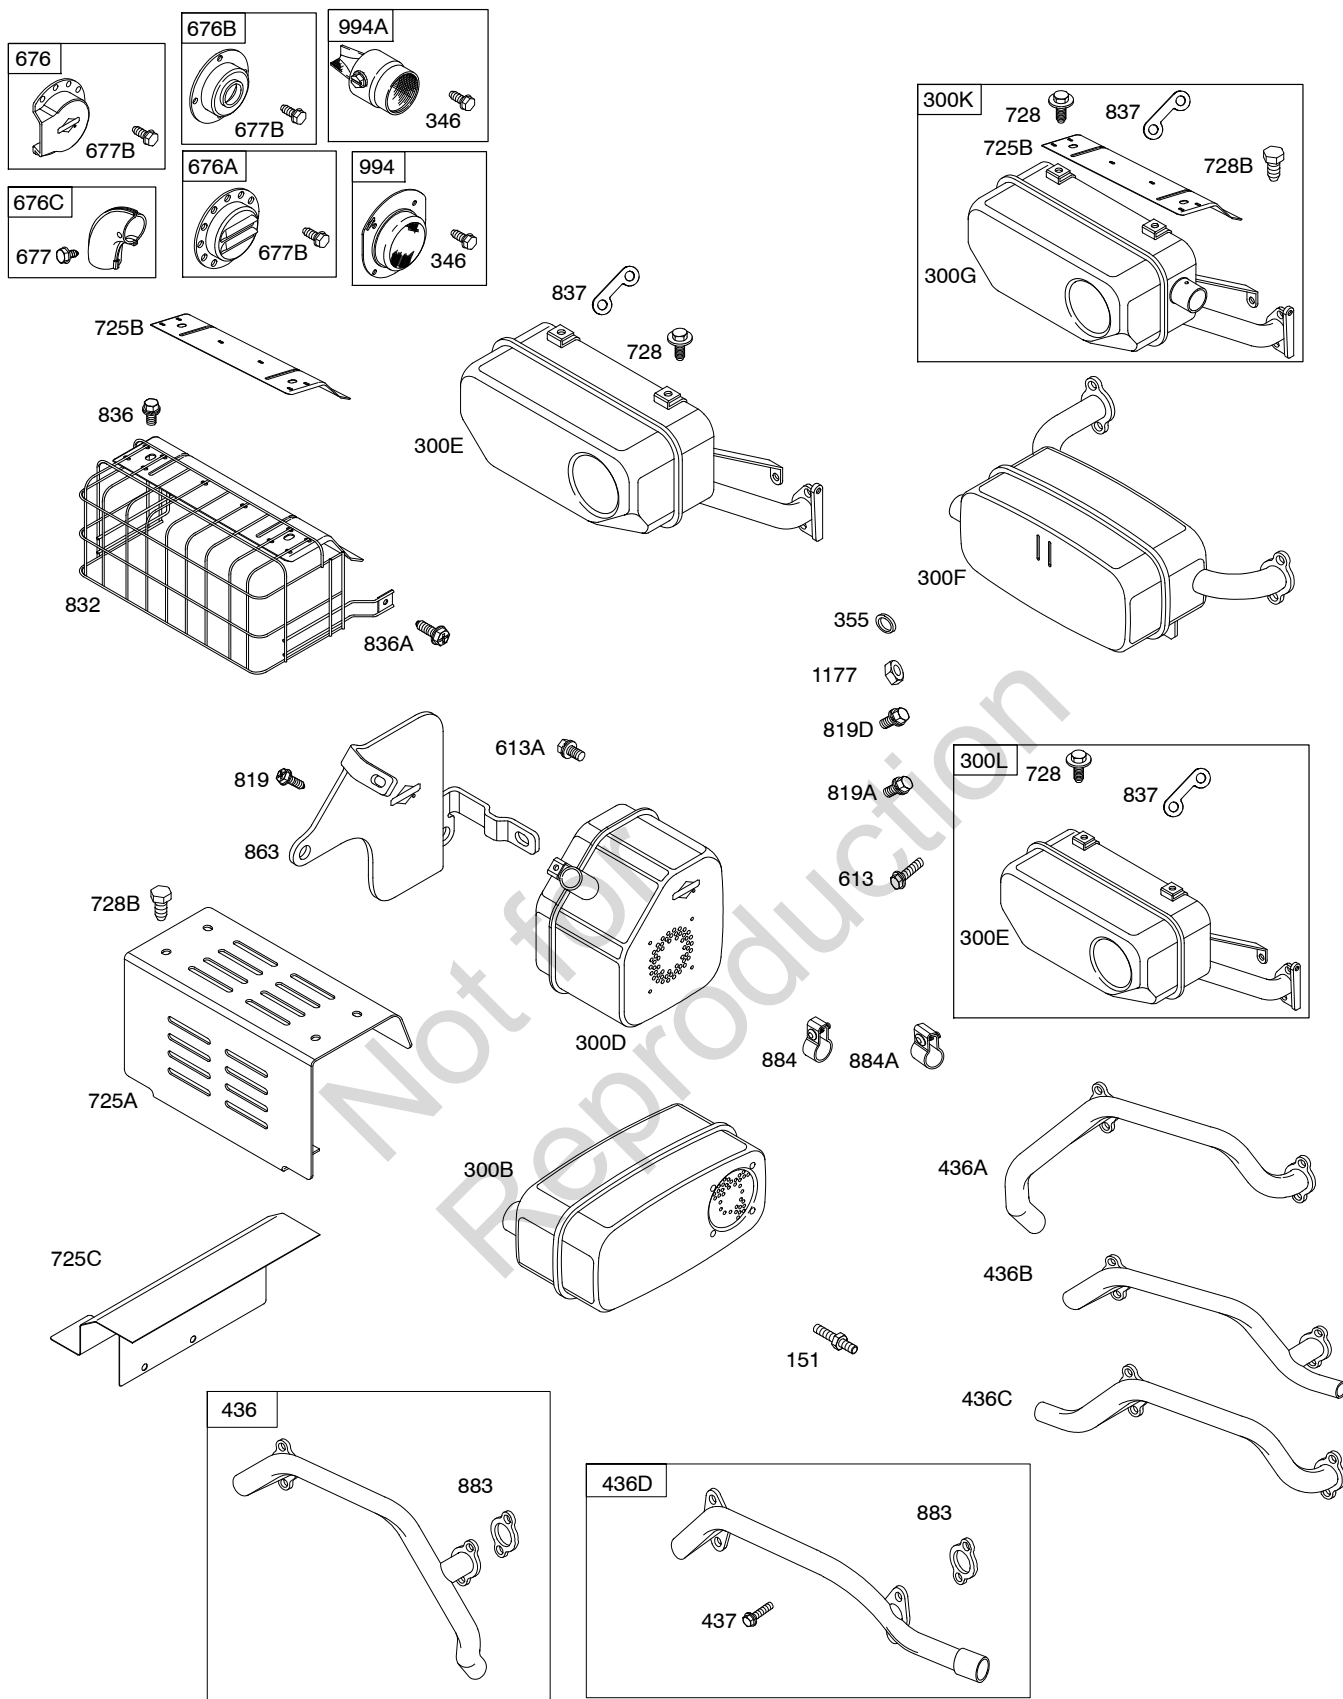



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-9 Assemblies include all parts shown in frames. **11/30/2012**

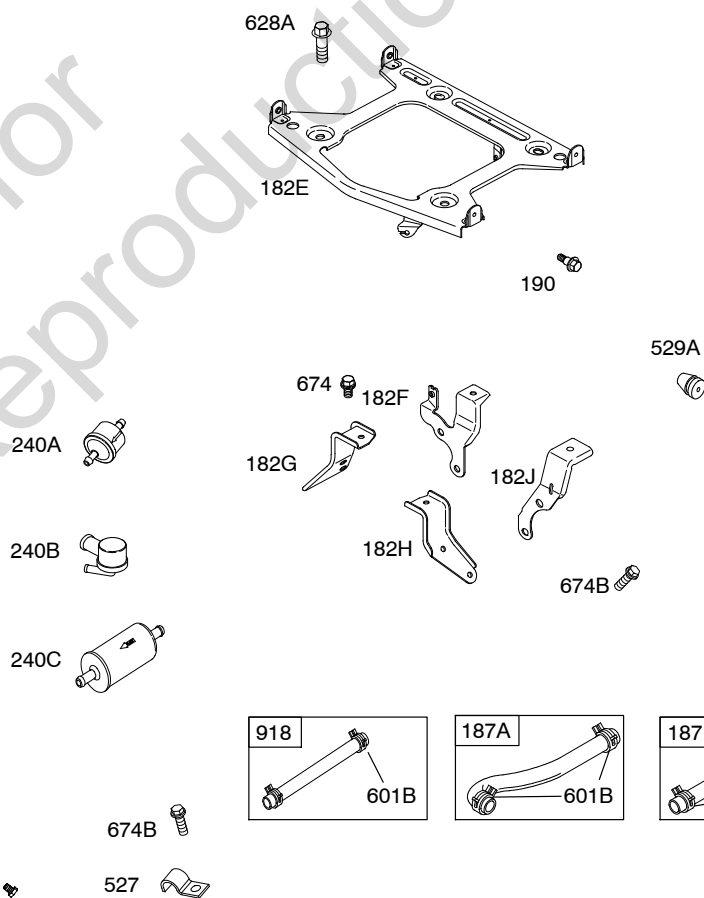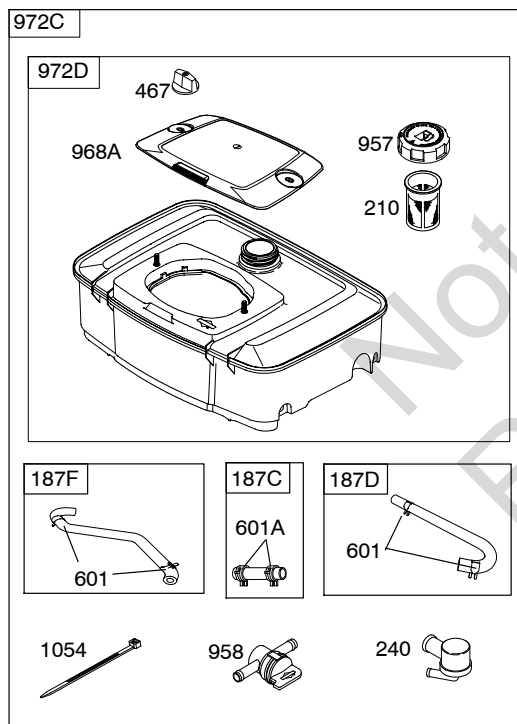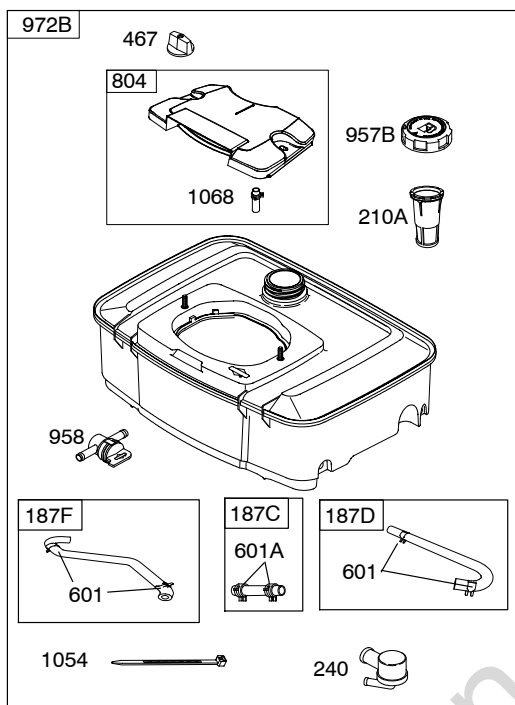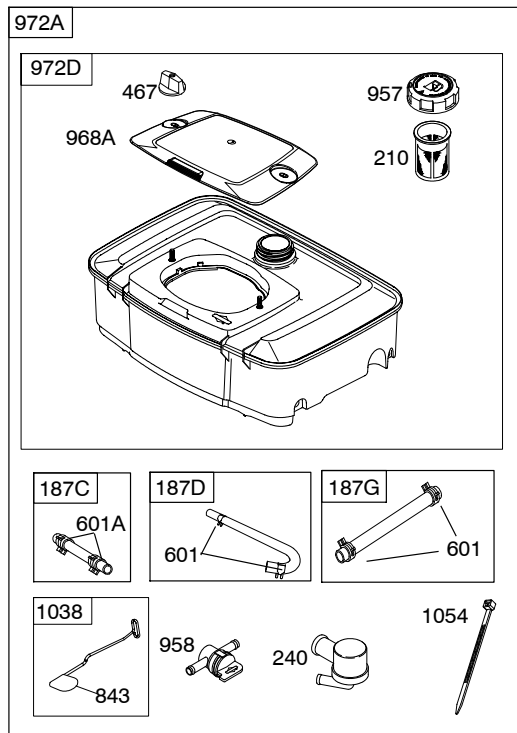


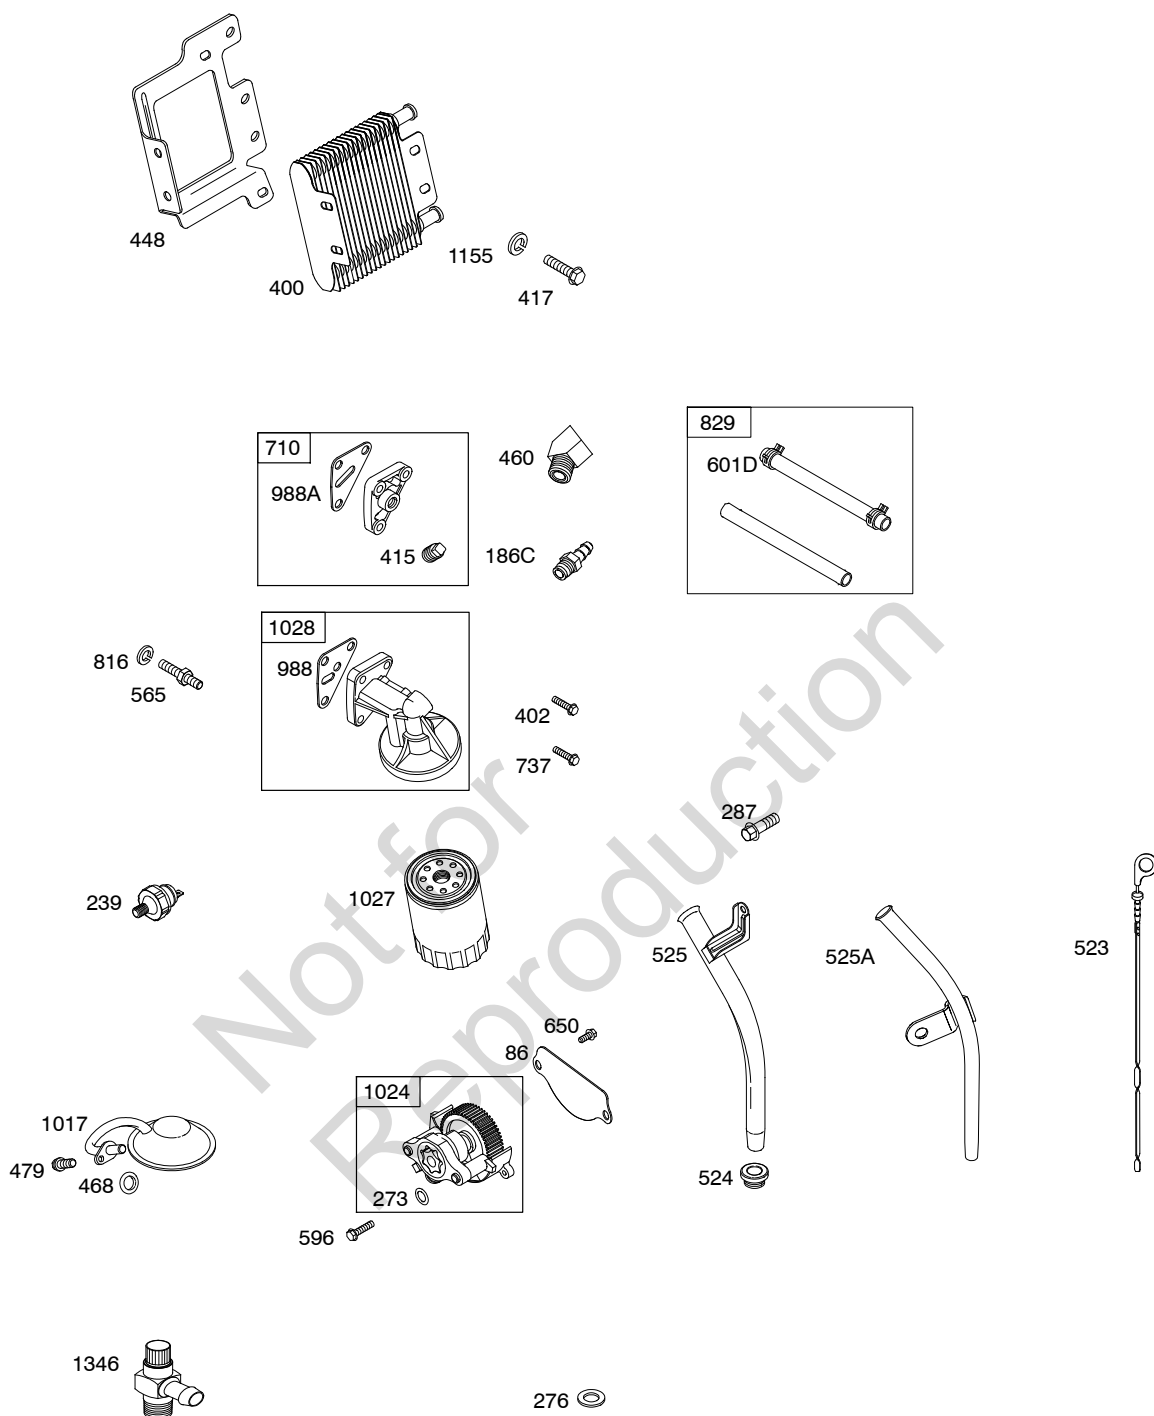

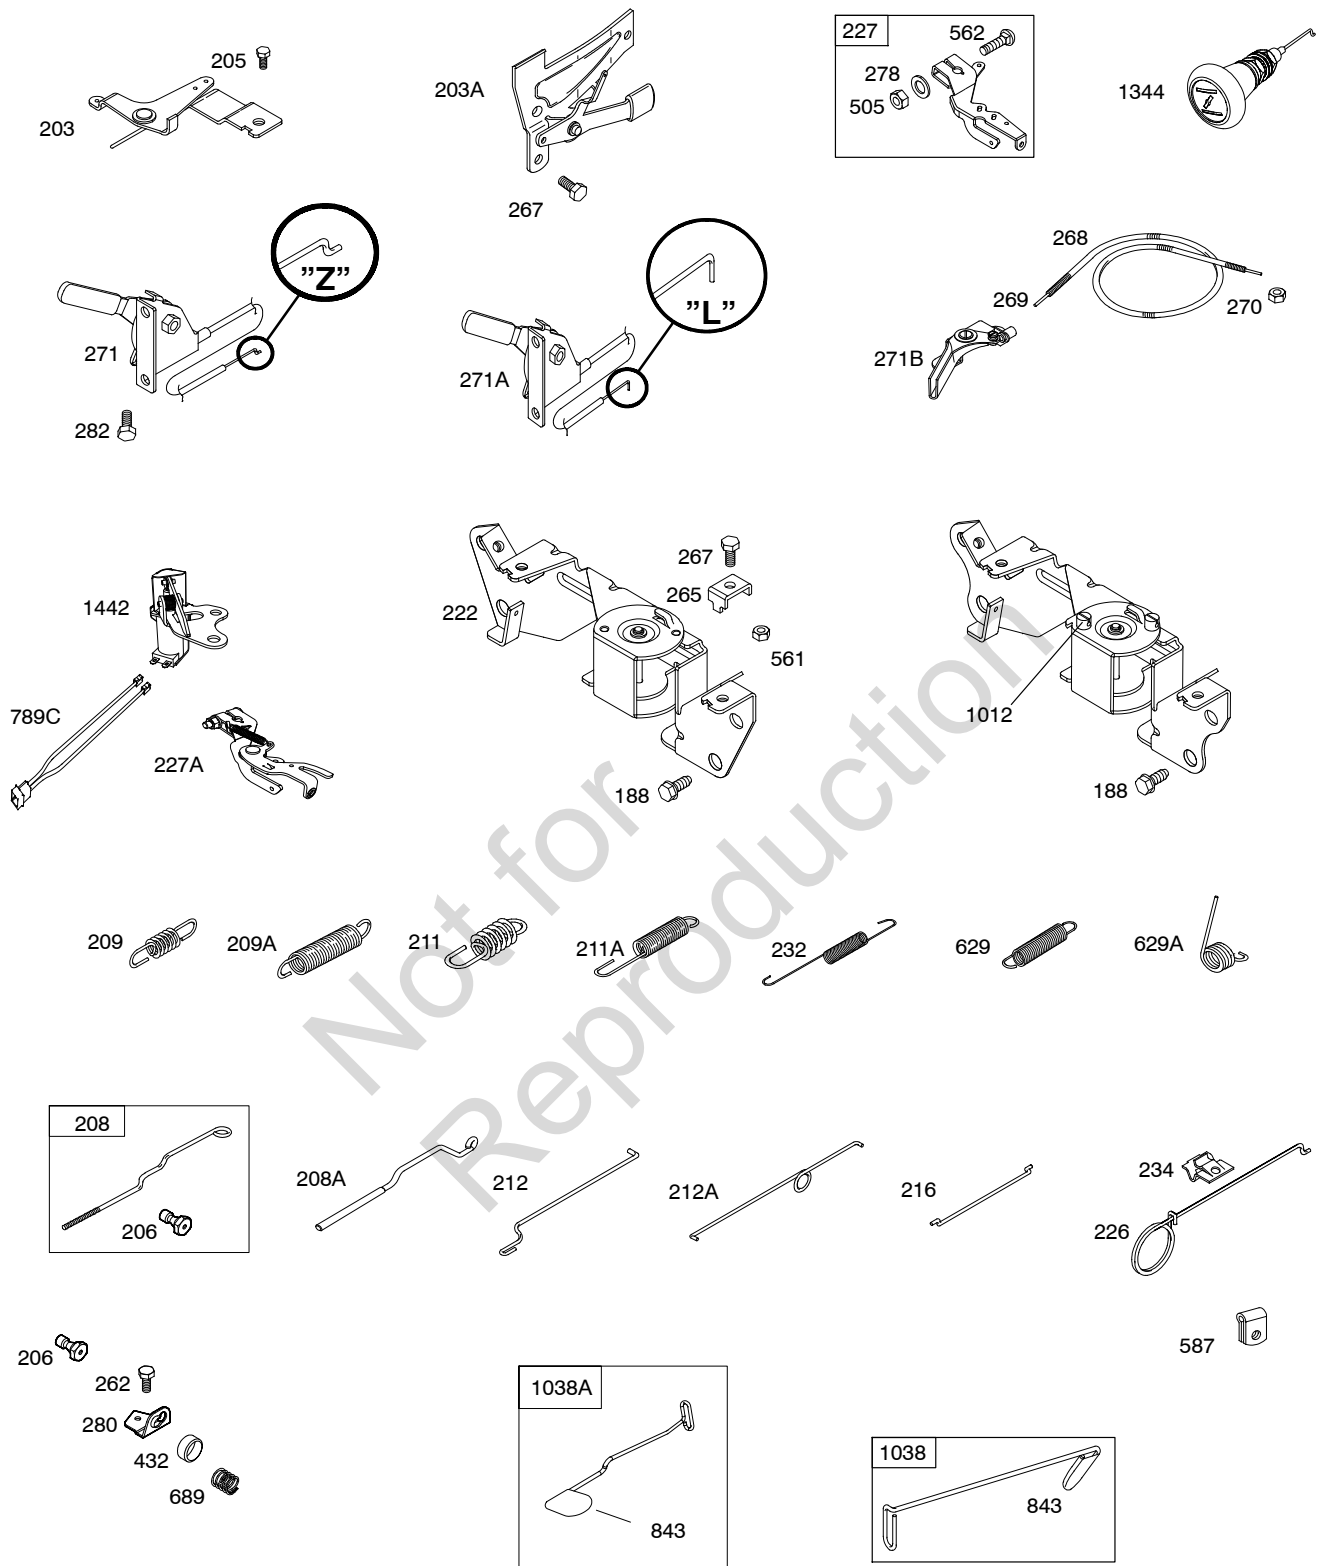


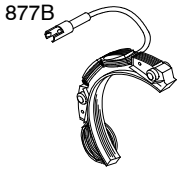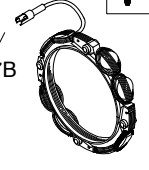
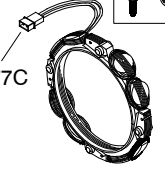
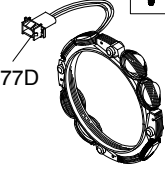
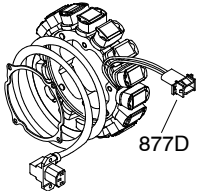
 
 
 
 
 
 
NOTE: All stators use a No. 1119 mounting screw. 	DC -ONLY	5 - 9 AMP	10 - 16 AMP	20 AMP	20 AMP POWER LINK
	474B 	1059  474C 	1059  474D 	1059  474E 	1059  474F 
		877B 	877C 	877D 	877D 
		878 	578 	578 	578 
		526A  501A 	526  501 	526B  501B 	

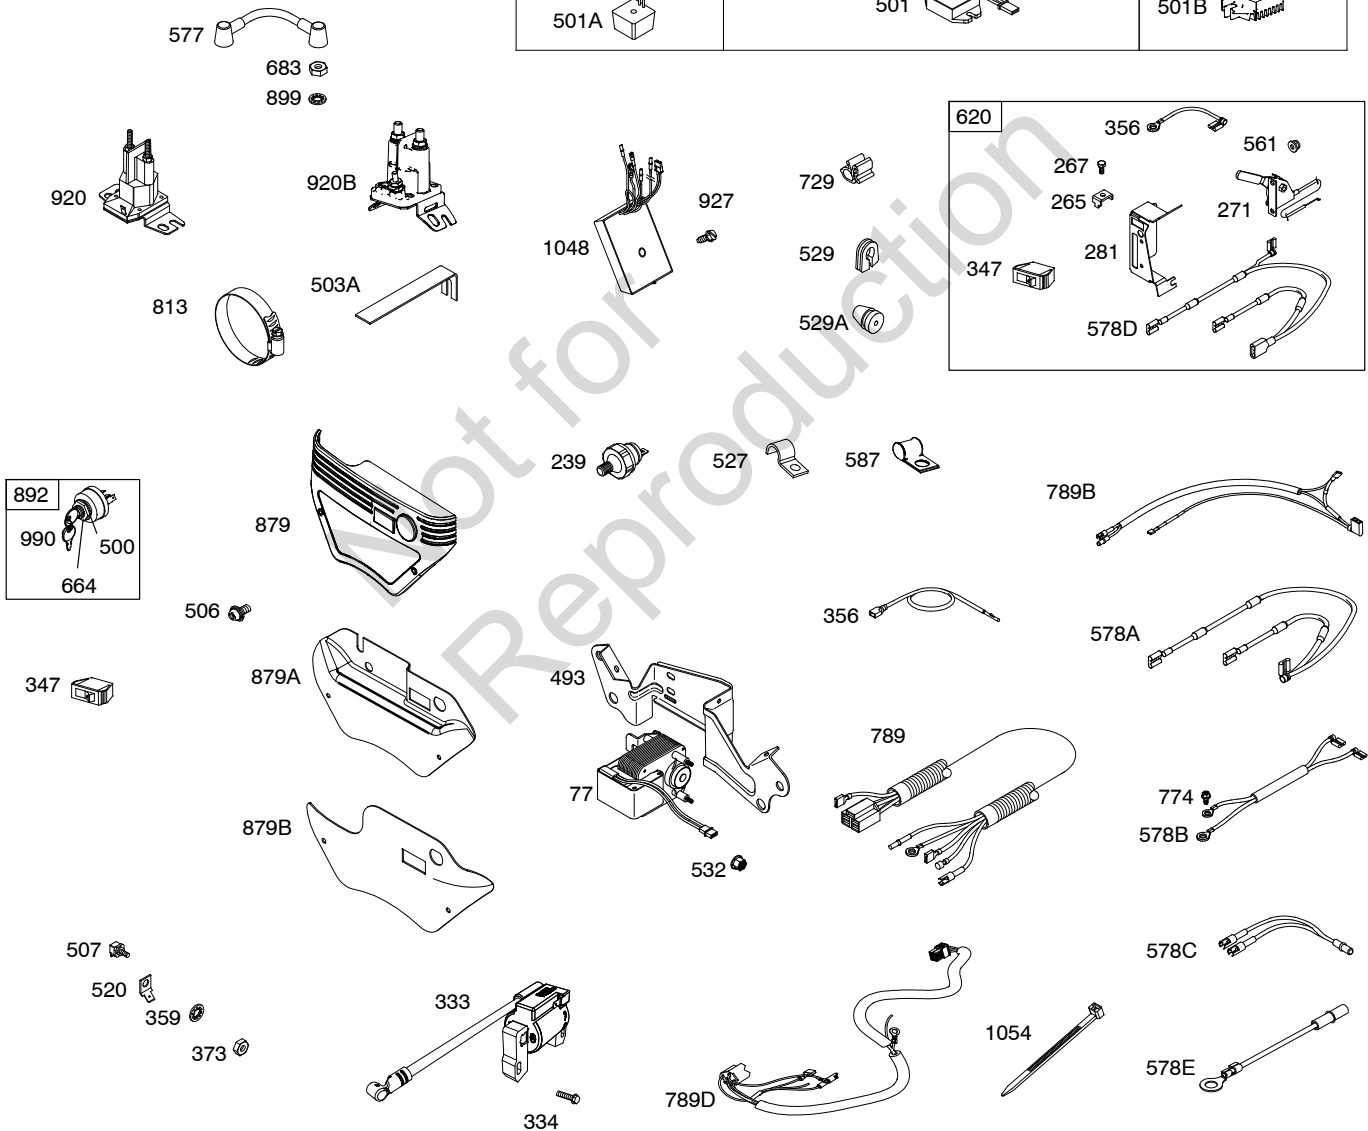


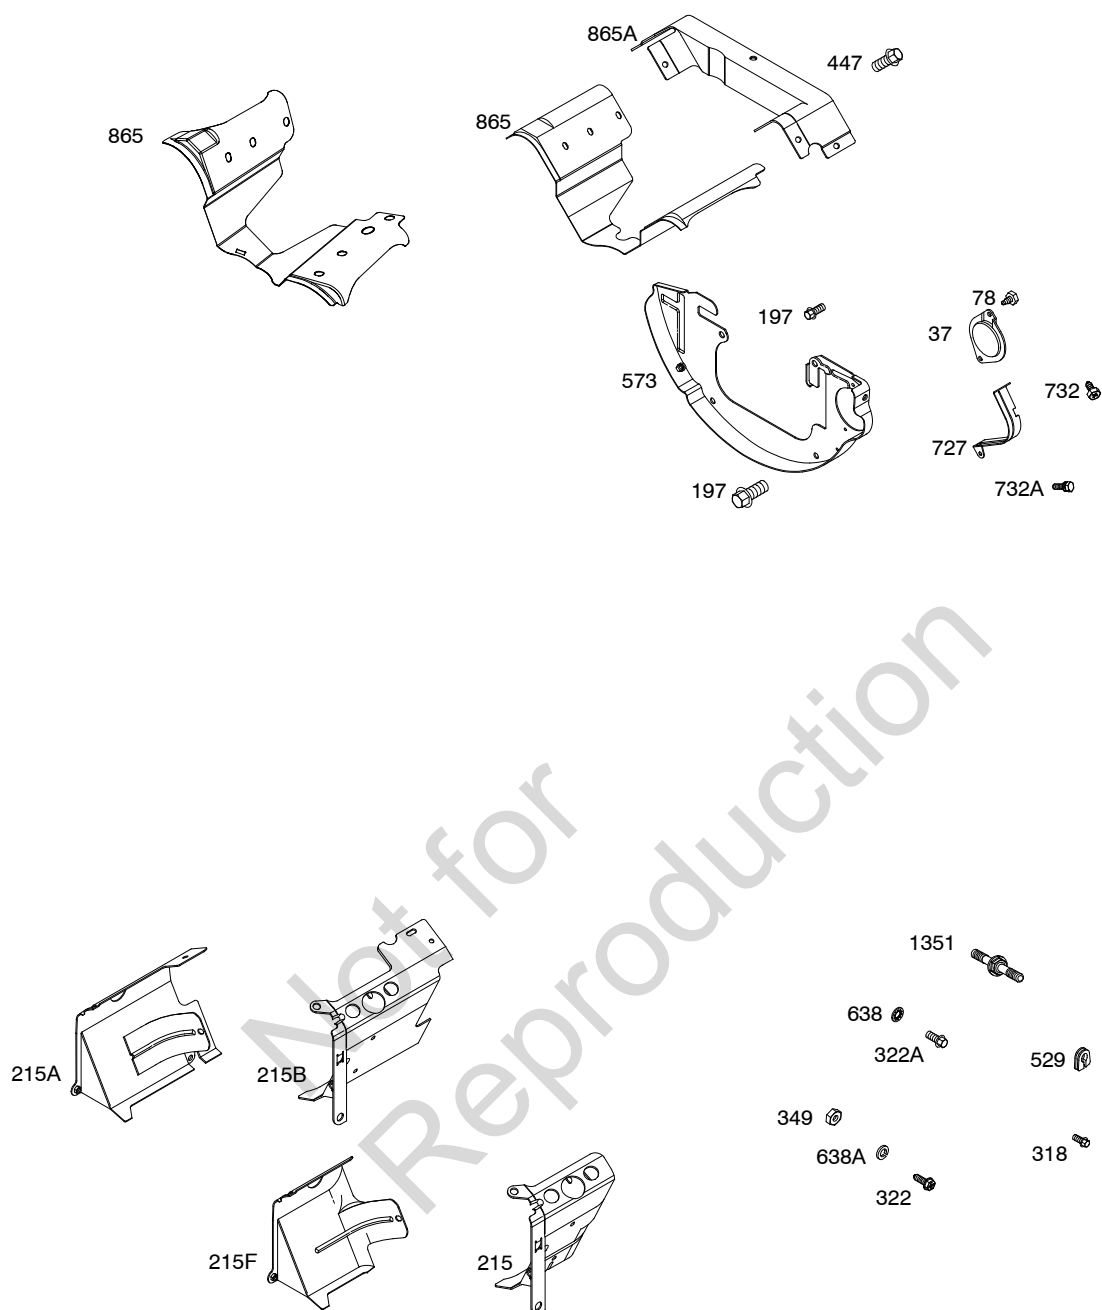



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


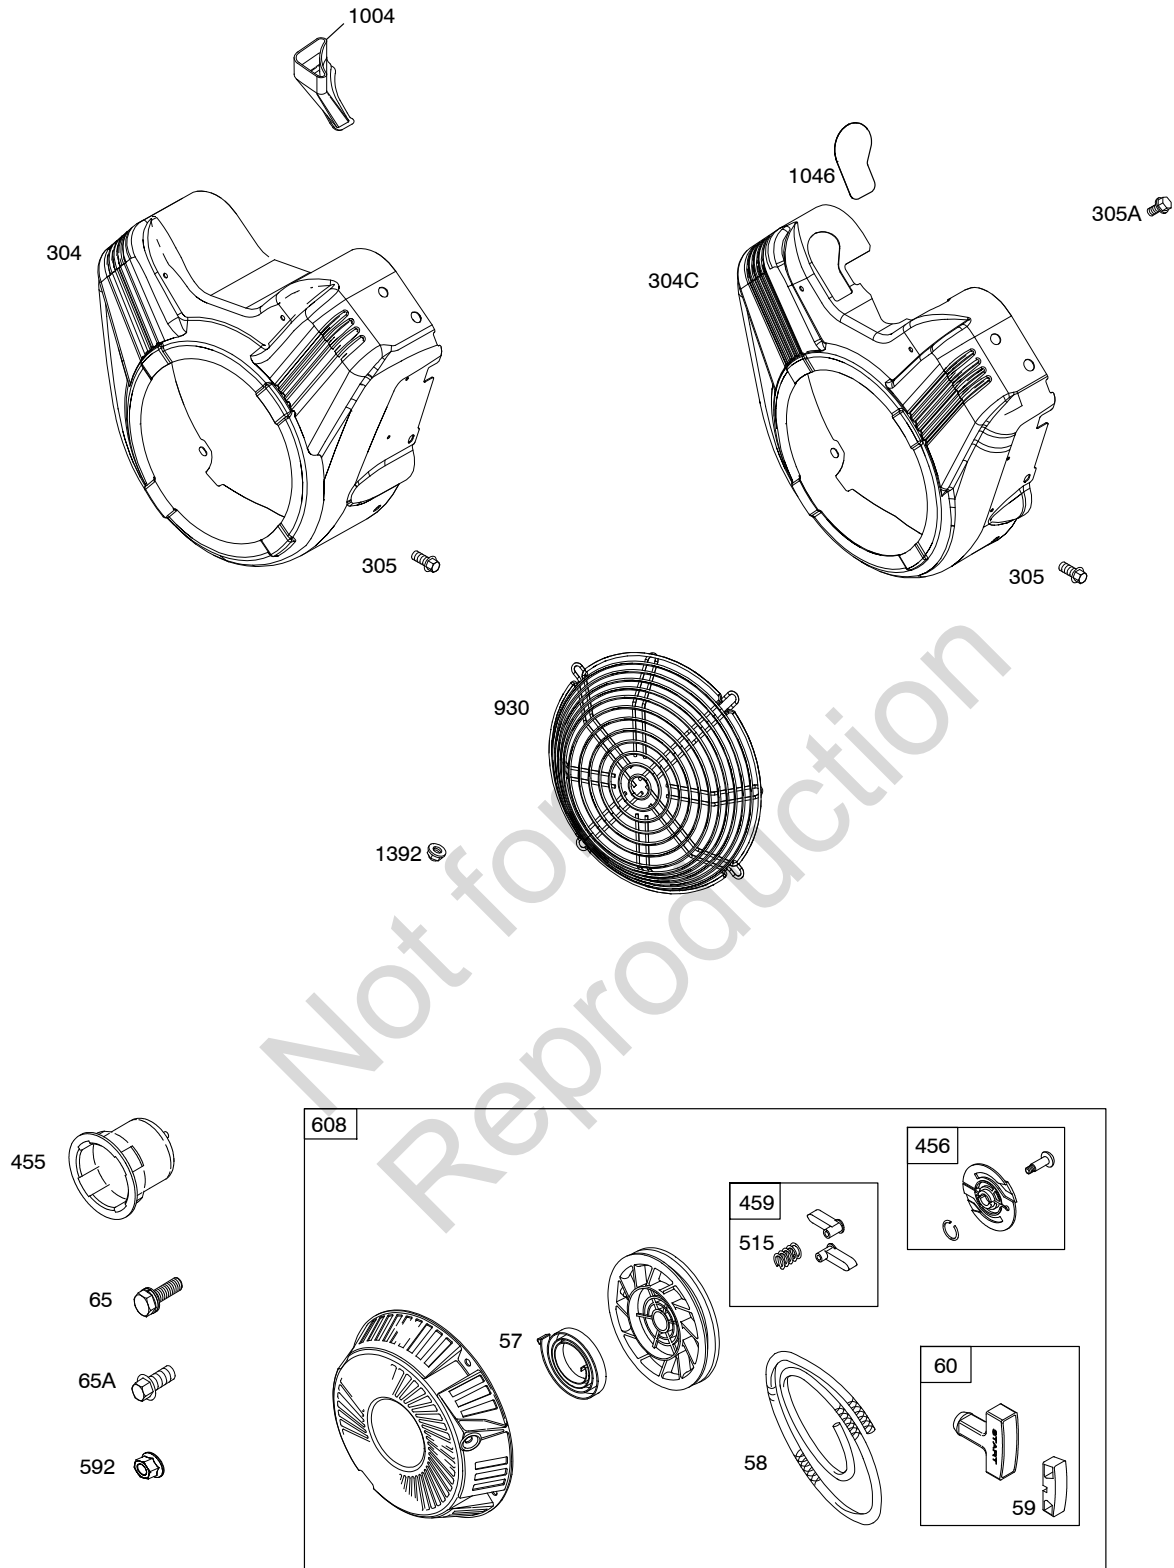


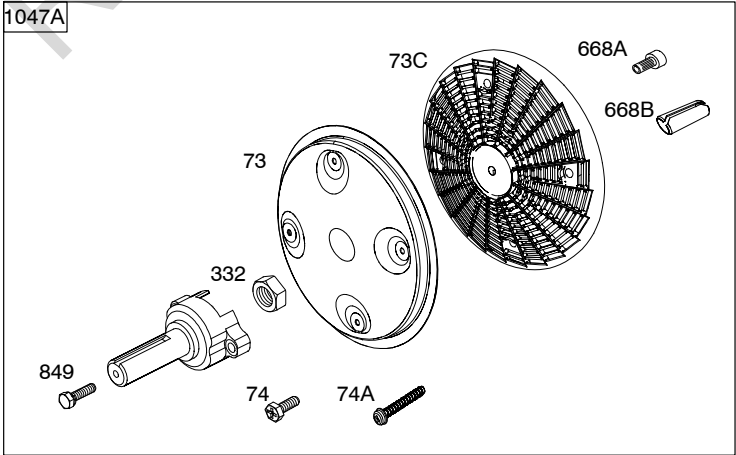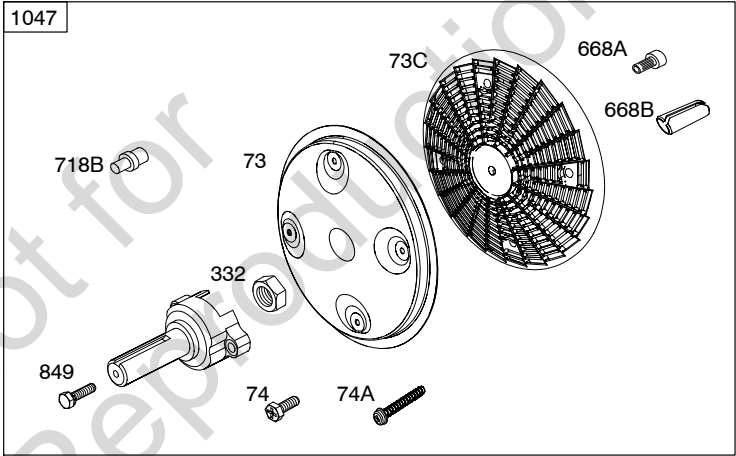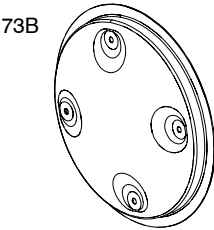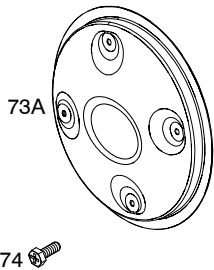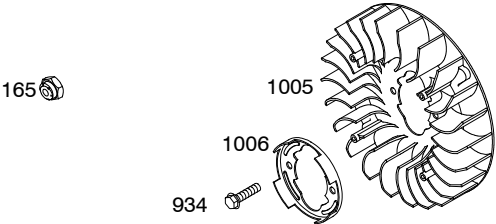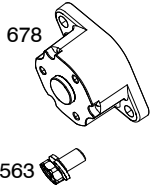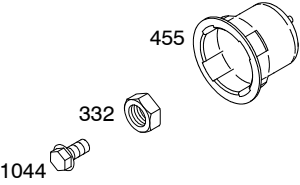
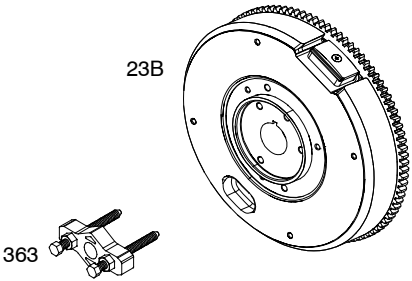
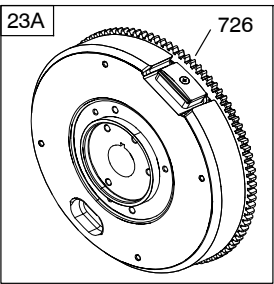
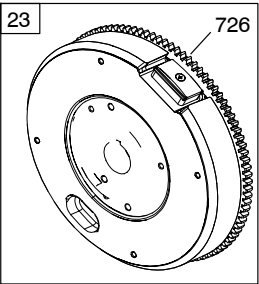


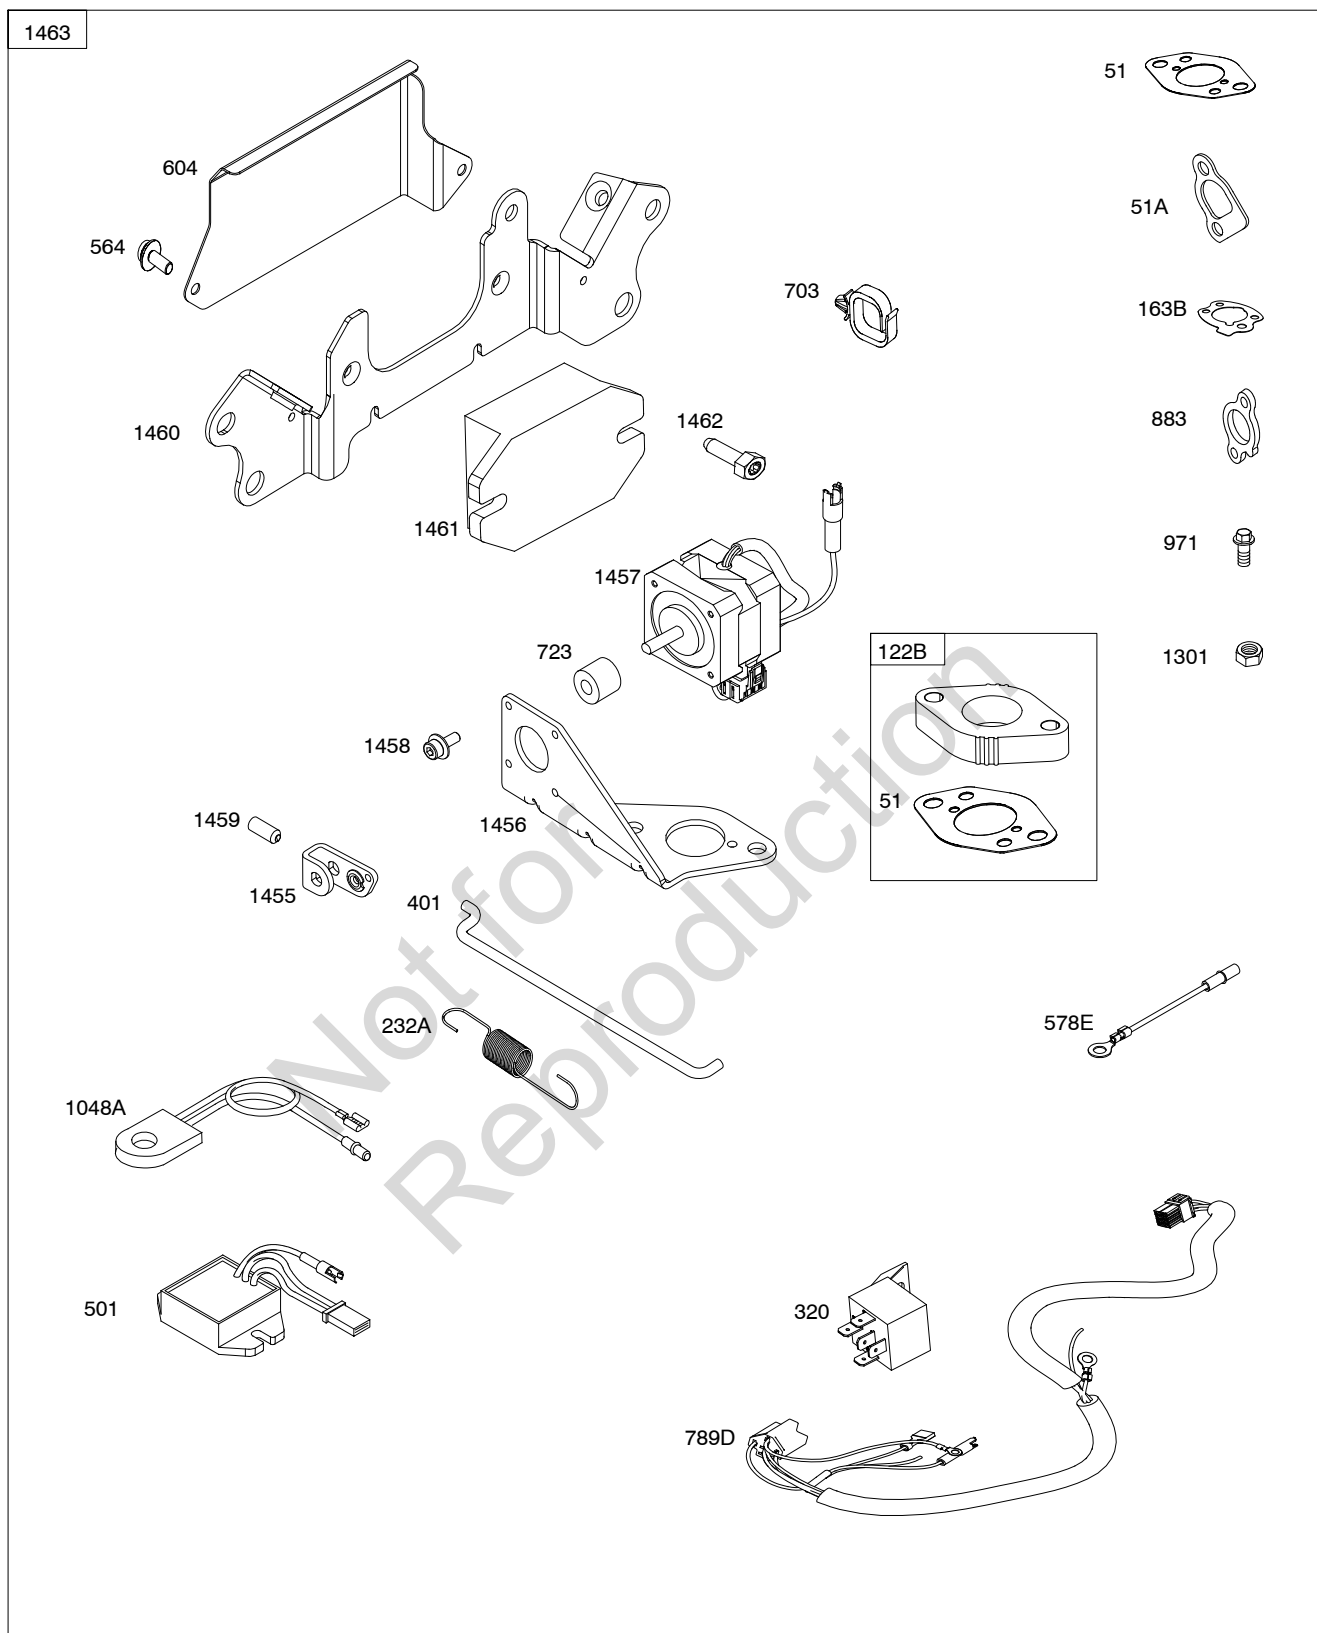

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

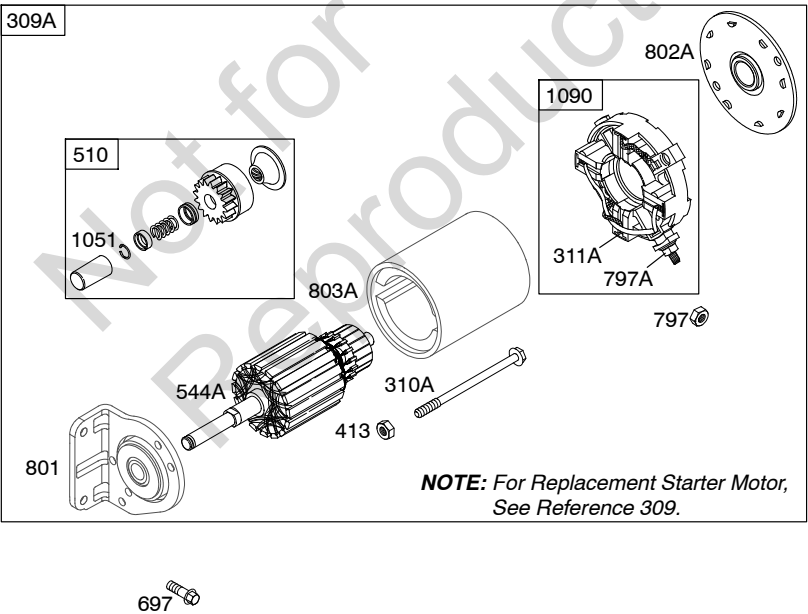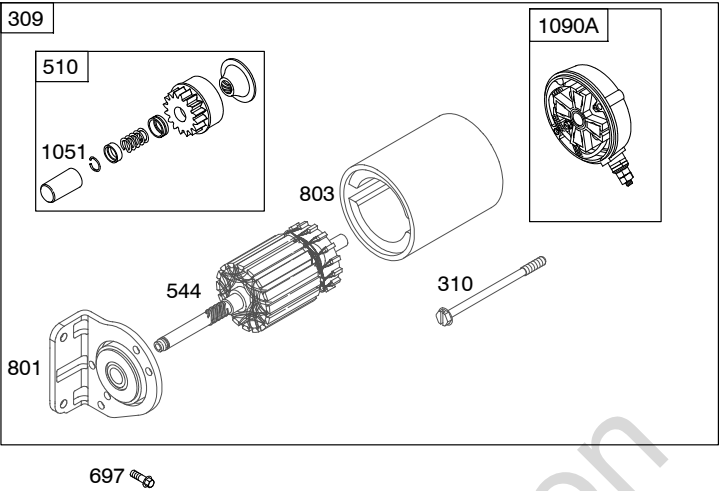

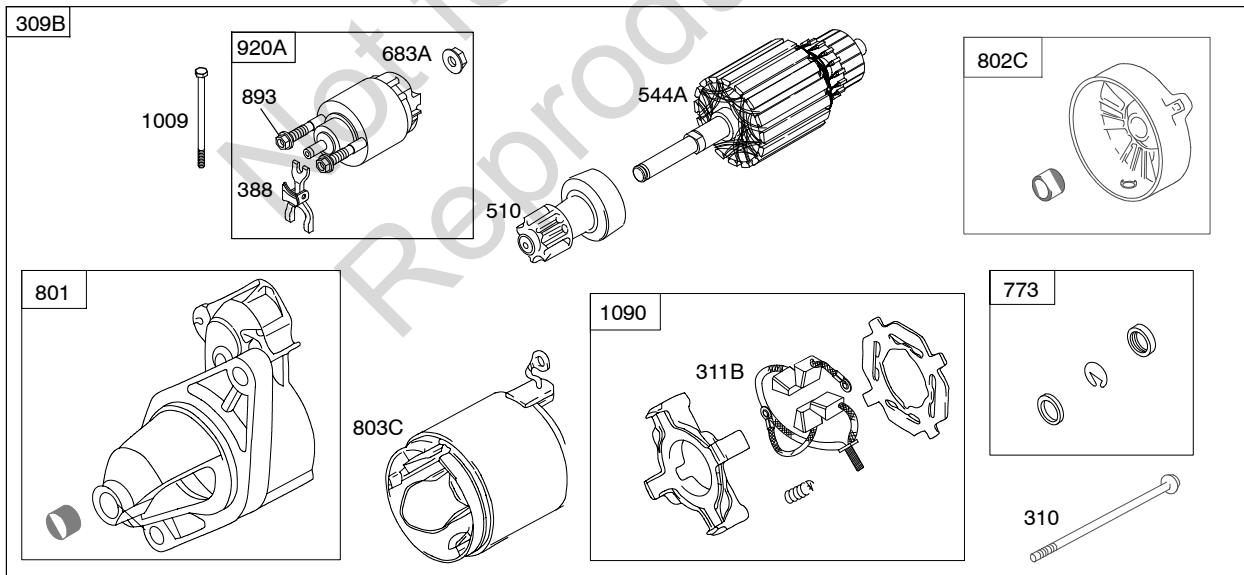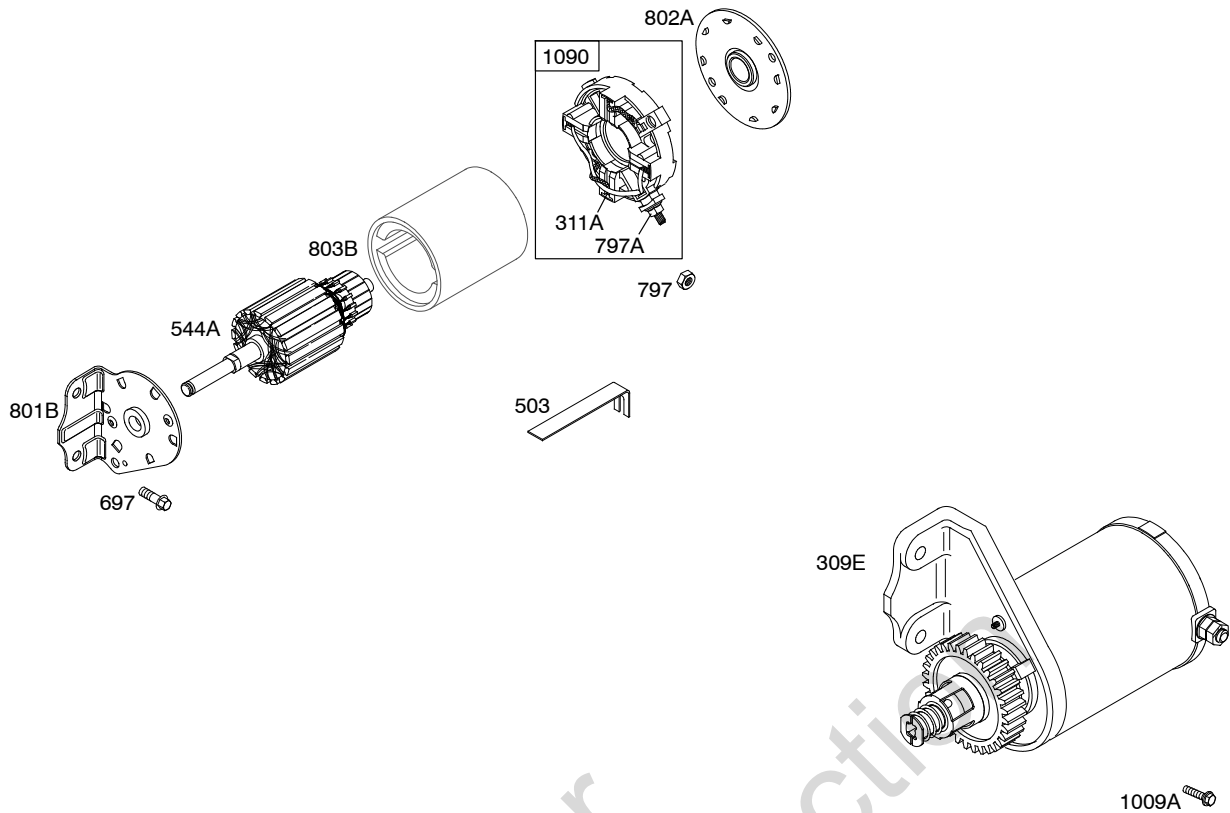

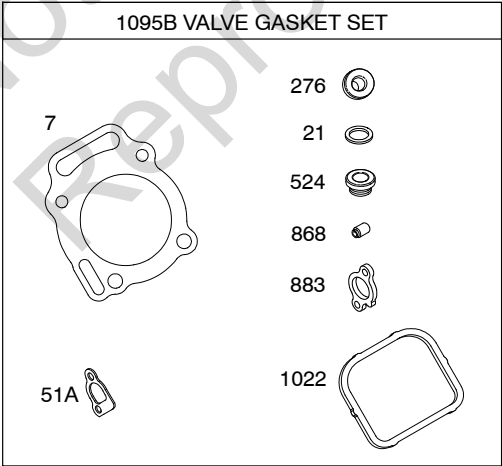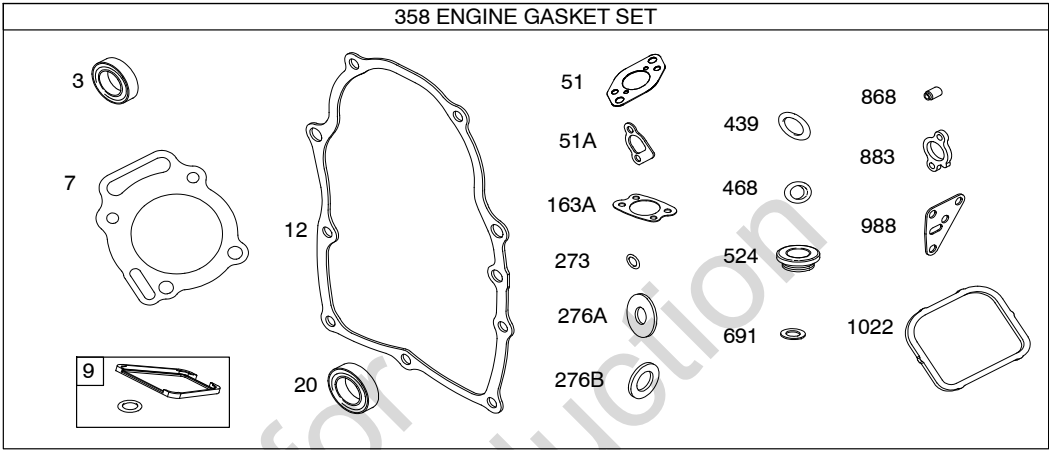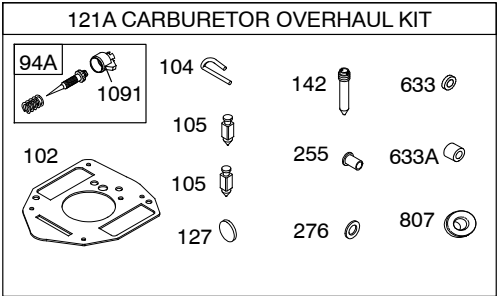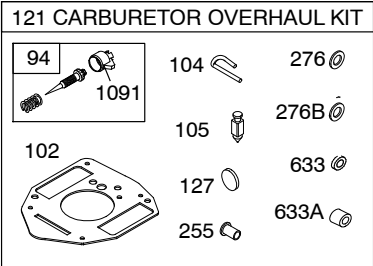

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692544	Cylinder Assembly ----- Note ----- 841579 Cylinder Assembly Used on Type No(s). 0116, 0166, 0167, 0175. 841562 Cylinder Assembly Used on Type No(s). 0130, 0165, 0207, 0292, 0374, 1415. 845746 Cylinder Assembly Used on Type No(s). 0155, 0183, 0364, 0404.	11A	806083s	Tube-Breather (Used Before Code Date 09122300)			0140, 0142, 0145, 0148, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0162, 0163, 0164, 0165, 0168, 0169, 0172, 0174, 0177, 0178, 0180, 0181, 0183, 0186, 0195, 0197, 0199, 0213, 0243, 0247, 0248, 0257, 0259, 0263, 0264, 0270, 0287, 0290, 0292, 0298, 0303, 0305, 0307, 0310, 0316, 0317, 0322, 0326, 0348, 0354, 0364, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0383, 0384, 0385, 0386, 0389, 0398, 0402, 0404, 0565, 0600-H1, 0606, 0609, 1154, 1270, 1287, 3079.
2	808534	Kit-Bushing/Seal (Magneto Side)						843803 Crankshaft Used on Type No(s). 0179-G1, 0304.
3	805101s	Seal-Oil (Magneto Side)	11B	844921	Tube-Breather (Used After Code Date 09122200)			843802 Crankshaft Used on Type No(s). 0087, 0133, 0229, 0279, 0363, 0369, 0600-B1, 1279, 3087.
5	809185	Head-Cylinder (Cylinder 1)	11C	845585	Tube-Breather Used on Type No(s). 0304.			843795 Crankshaft Used on Type No(s). 0077, 0171, 0189, 0191, 0381, 0601, 0607, 3077.
5A	809186	Head-Cylinder (Cylinder 2)	11D	844976	Tube-Breather Used on Type No(s). 0364.			843797 Crankshaft Used on Type No(s). 0395.
7	690888	Gasket-Cylinder Head (Graphoil)	11E	844445	Tube-Breather Used on Type No(s). 0404.			843800 Crankshaft Used on Type No(s). 0311, 0312, 0387.
8	808984	Breather Assembly	12	842589	Gasket-Crankcase ----- Note ----- 845254 Gasket Crankcase (Metal) Used on Type No(s). 0200-G1, 0280-G1, 0286-G1, 0360.			843990 Crankshaft Used on Type No(s). 0147, 0194, 0405.
9	844986	Gasket-Breather	13	692059	Screw (Cylinder Head)			
10	690751	Screw (Breather Assembly)	15	690946	Plug-Oil Drain			
10A	806421	Screw (Breather Cover)	16	809806	Crankshaft ----- Note ----- 809811 Crankshaft Used on Type No(s). 0005, 0006, 0078, 0121, 0122, 0126, 0128, 0141, 0149, 0150, 0152, 0173, 0194, 0202, 0208, 0219, 0319. 809803 Crankshaft Used on Type No(s). 0171, 0189, 0191. 809822 Crankshaft Used on Type No(s). 0203. 809833 Crankshaft Used on Type No(s). 0087, 0133. 809837 Crankshaft Used on Type No(s). 0179. 843794 Crankshaft Used on Type No(s). 0001, 0009, 0065, 0066, 0075, 0096, 0114, 0115, 0117, 0118, 0119, 0123, 0124, 0125, 0127, 0129, 0130, 0139.			
11	691556	Tube-Breather Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0130, 0147, 0148, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0213, 0218, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0290, 0311, 0312, 0317, 0325, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0405, 0565, 0600, 0601, 1287.						

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
17	843827	Bearing-Ball	23A	809174	Flywheel	33A	807681	Valve-Exhaust		
18	844588	Cover-Crankcase			Used on Type No(s).	34A	807680	Valve-Intake		
		----- Note -----			0116, 0166, 0167,	35	692084	Spring-Valve		
		8447239 Cover-			0175.			(Intake)		
		(Used After Code Date			----- Note -----	36	692084	Spring-Valve		
		07101400).			841050 Flywheel			(Exhaust)		
		Used on Type No(s).			Used on Type No(s).	37	841309	Guard-Flywheel		
		0203.			0009, 0115, 0135,	40	692058	Retainer-Valve		
		808850 Cover-			0142, 0174, 0178,	42	807683	Keeper-Valve		
		Crankcase			0195, 0200, 0217,	45	843379	Tappet-Valve		
		(Used Before Code			0259, 0264, 0270,	46	845649	Camshaft		
		Date 07101500).			0280, 0283, 0307,			----- Note -----		
		Used on Type No(s).			0348, 0368, 0377,			692157 Camshaft		
		0203.			0383, 0389, 0402,			Used on Type No(s).		
18A	844725	Cover-Crankcase	23B	841957	Flywheel			0005, 0009, 0115,		
		(Used After Code Date			Used on Type No(s).			0116, 0149, 0150,		
		07101400).			0065, 0126, 0127,			0174, 0175, 0264,		
		Used on Type No(s).			0128, 0186, 0224,	46A	842064	0395.		
		0005, 0009, 0115,			0229, 0248, 0257,			Camshaft		
		0116, 0149, 0150,			0298, 0298, 0326,	50	690754	Used on Type No(s).		
		0174, 0175, 0395.			0354, 0363, 0370,	50A	844034	0173.		
		----- Note -----			0565, 0600, 0601,			Manifold-Intake		
		808508 Cover-			1287.			Used on Type No(s).		
		Crankcase	25	843792	Piston Assembly			0005, 0075, 0077,		
		(Used Before Code			(Standard)			0078, 0087, 0117,		
		Date 07101500).			(Used After Code Date			0259, 0295, 0307,		
		Used on Type No(s).			07062900)			0364, 0368.		
		0005, 0115, 0116,			----- Note -----	51	691694	Gasket-Intake		
		0149, 0150, 0174,			844540 Piston-			(Manifold To		
		0175.			Assembly			Carburetor)		
20	805049s	Seal-Oil			(Standard)	51A	692035	Gasket-Intake		
		(PTO Side)			(Used Before Code			(Manifold to Head)		
21	809500	Cap-Oil Fill			Date 07063000).	54	690676	Screw		
22	807362	Screw			843821 Piston			(Intake Manifold)		
		(Crankcase			Assembly	57	692086	Spring-Rewind Starter		
		Cover/Sump)			(.020" Oversize)	58	66574	Rope-Starter		
23	809236	Flywheel			26	843793	Ring Set	59	805957	Insert-Grip
		(Steel Ring Gear)			(Standard)			60	808167	Grip-Starter Rope
		----- Note -----			----- Note -----	65	690341	Screw		
		841728 Flywheel			843822 Ring Set			(Rewind Starter)		
		Used on Type No(s).			(.020" Oversize)			(5/16-18, x 0.875)		
		0119, 0148, 0153,			27	690683	Lock-Piston Pin	65A	841233	Screw
		0213, 0299, 0311,			28	844541	Pin-Piston			(Rewind Starter)
		0312, 0369, 0370,			(Standard)					(M6 x 10mm)
		0387, 0398.			29	807900s	Rod-Connecting			
		842442 Flywheel			(Standard)					
		Used on Type No(s).			32	690698	Screw			
		0130, 0165, 0207,			(Connecting Rod)					
		0292, 0374, 1415.								
		842259 Flywheel								
		Used on Type No(s).								
		0365, 0378, 0384.								

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
73	841582	Screen-Rotating Used on Type No(s). 0114, 0115, 0116, 0148, 0154, 0156, 0172, 0174, 0175, 0179, 0220, 0304, 0312, 0365, 0386, 0387, 1154, 3285.	94B	845021	Kit-Idle Mixture Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115, 0117, 0118, 0119, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0208, 0213, 0214, 0224, 0259, 0229, 0243, 0247, 0248, 0257, 0263, 0264, 0266, 0270, 0279, 0287, 0292, 0298, 0303, 0304, 0305, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0389, 0398, 0402, 0404, 0405, 0565, 0600, 0601, 0606, 0607, 0609, 1154, 1270, 1287, 3079, 3087, 3285.	97	809062	Shaft-Throttle ----- Note ----- 807495 Shaft-Throttle Used on Type No(s). 0162, 0200, 0307.
73A	841662	Screen-Rotating				97A	842734	Shaft-Throttle Used on Type No(s). 0179, 0304, 0395.
73B	841440	Screen-Rotating Used on Type No(s). 0001, 0007, 0079, 0117, 0118, 0124, 0129, 0135, 0139, 0140, 0141, 0153, 0157, 0158, 0159, 0162, 0171, 0177, 0178, 0191, 0197, 0200, 0201, 0203, 0213, 0216, 0263, 0264, 0295, 0305, 0307, 0310, 0319, 0322, 0364, 0367, 0375, 0380, 0381, 0404, 3079.				98	808177	Kit-Idle Speed
						98A	808981	Kit-Idle Speed Used on Type No(s). 0162, 0179, 0200, 0307.
73C	494439	Screen-Rotating Used on Type No(s). 0304.				102	692077	Gasket-Carburetor Body
74	841441	Screw (Rotating Screen) (Used After Code Date 04021500). ----- Note ----- 807112 Screw (Rotating Screen) (Used Before Code Date 04021600).				104	690723	Pin-Float Hinge
74A	691647	Screw Used on Type No(s). 0304.						
77	690819	Motor-Servo						
78	690688	Screw (Flywheel Guard)						
86	690745	Cover-Gear						
91	809208	Body-Upper Carburetor Used on Type No(s). 0162, 0200.	94C	844987	Kit-Idle Mixture Used on Type No(s). 0307.			
94	842880	Kit-Idle Mixture						
94A	842870	Kit-Idle Mixture Used on Type No(s). 0162, 0200.	95	690718	Screw (Throttle Valve)			

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
105	805620	Valve-Float Needle Used on Type No(s). 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0130, 0146, 0148, 0153, 0154, 0155, 0157, 0158, 0159, 0160, 0167, 0168, 0173, 0180, 0181, 0183, 0189, 0191, 0206, 0208, 0210, 0213, 0238, 0247, 0251, 0253, 0267, 0284, 0290, 0337, 0373, 0374, 0385, 0405, 0600, 0601. ----- Note ----- 797410 Valve-Float Needle Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0075, 0077, 0078, 0087, 0114, 0115, 0117, 0118, 0119, 0121, 0123, 0124, 0126, 0128, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0149, 0150, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0169, 0171, 0172, 0174, 0177, 0178, 0186, 0194, 0195, 0197, 0199, 0214, 0224, 0229, 0243, 0248, 0257, 0259, 0263, 0264, 0266, 0270, 0279, 0287, 0292, 0298, 0303, 0304, 0305, 0307, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0375, 0377, 0380, 0381, 0383, 0383, 0384, 0386, 0387, 0565, 0389, 0398, 0402, 0404, 0606, 0607, 0609, 1154, 1270, 1287, 3077, 3079, 3087, 3285.	105A 808798 Valve-Float Needle 108 690719 Valve-Choke Used on Type No(s). 0162, 0200. 108A 806134 Valve-Choke ----- Note ----- 844989 Valve-Choke Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115, 0117, 0118, 0119, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0208, 0214, 0224, 0229, 0243, 0247, 0248, 0257, 0259, 0263, 0264, 0266, 0270, 0279, 0287, 0292, 0298, 0303, 0304, 0305, 0307, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0395, 0389, 0398, 0402, 0404, 0405, 0565, 0600, 0601, 0606, 0607, 0609, 1154, 1270, 1287, 3077, 3079, 3087, 3285. 109 808398 Shaft-Choke 109A 809096 Shaft-Choke Used on Type No(s). 0162, 0200.	109B 843321 Shaft-Choke Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115, 0117, 0118, 0119, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0146, 0147, 0149, 0150, 0153, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0167, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0180, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0206, 0208, 0210, 0213, 0214, 0224, 0229, 0238, 0243, 0247, 0247, 0248, 0251, 0253, 0257, 0259, 0263, 0266, 0267, 0270, 0279, 0284, 0287, 0290, 0292, 0298, 0303, 0304, 0305, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0337, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0395, 0389, 0398, 0402, 0404, 0405, 0565, 0600, 0601, 0606, 0607, 0609, 1154, 1270, 1287, 3079, 3087, 3285. 110 806861 Washer (Choke Shaft)				

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION																											
117	690862	Jet-Main (Standard) Used on Type No(s). 0213, 0162, 0200, 0264.	117A	806373	Jet-Main (Standard) Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115, 0117, 0118, 0119, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0208, 0214, 0224, 0229, 0243, 0247, 0248, 0257, 0259, 0263, 0266, 0270, 0279, 0287, 0292, 0298, 0303, 0305, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0395, 0389, 0398, 0402, 0405, 0565, 0600, 0601, 0606, 0607, 0609, 1154, 1270, 1287, 3077,, 3079, 3087, 3285. ----- Note ----- 806439 Jet-Main (Standard) Used on Type No(s). 0364.	117B	806126	Jet-Main (Standard)	117C	842439	Jet-Main (Standard) Used on Type No(s). 0304, 0404.	117D	690881	Jet-Main (Standard) Used on Type No(s). 0307.	118	809685	Jet-Main (High Altitude) ----- Note ----- 842439 Jet Main (High Altitude) (5000 Feet) Used on Type No(s). 0005, 0266, 0298, 0395, 0565, 3077, 3087. 806126 Jet Main (High Altitude) (5000 Feet) Used on Type No(s). 0304. 809442 Jet Main (High Altitude) (5000 Feet) Used on Type No(s). 0162, 0200, 0280. 844285 Jet Main (High Altitude) (9000 Feet) Used on Type No(s). 0364.	119	690720	Screw (Upper To Lower Carburetor Body)	121	842881	Kit-Carburetor Overhaul	121A	809021	Kit-Carburetor Overhaul Used on Type No(s). 0162, 0200.	122	690691	Spacer-Carburetor Used on Type No(s). 0162, 0172, 0179, 0200, 0307.	122A	690747	Spacer-Carburetor	122B	845817	Spacer-Carburetor Used on Type No(s). 0395.

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125B	843324	Carburetor ----- Note ----- 843326 Carburetor (Includes Solenoid) Used on Type No(s). 0179, 0286.	125H	809019	Carburetor (Gravity Feed) (Used Before Code Date 10010800) Used on Type No(s). 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0130, 0146, 0148, 0153, 0160, 0167, 0168, 0173, 0180, 0183, 0191, 0206, 0208, 0210, 0213, 0238, 0247, 0251. 0253, 0267, 0284, 0290, 0337, 0600, 0601.	133A	806961	Float-Carburetor
125C	843325	Carburetor Used on Type No(s). 0162, 0200, 0280.				133B	843320	Float-Carburetor Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115, 0117, 0118, 0119, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0208, 0214, 0224, 0229, 0243, 0247, 0248, 0257, 0259, 0263, 0279, 0287, 0292, 0298, 0303, 0304, 0305, 0310, 0311, 0316, 0317, 0319, 0322, 0326, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0395, 0389, 0398, 0402, 0404, 0405, 0606, 0607, 0609, 1154, 0565, 0600, 0601, 1287, 3079, 3285.
125D	845256	Carburetor Used on Type No(s). 0304.	125F	845241	Carburetor Used on Type No(s). 0307.			
125E	845023	Carburetor Used on Type No(s). 0004, 0005, 0006, 0075, 0077, 0078, 0087, 0119, 0121, 0124, 0126, 0128, 0133, 0141, 0142, 0147, 0149, 0150, 0154, 0155, 0164, 0165, 0171, 0181, 0186, 0189, 0194, 0195, 0197, 0199, 0213-B1, 0214, 0224, 0229, 0243, 0248, 0257, 0266, 0270, 0279, 0287, 0292, 0298, 0305, 0311, 0312, 0316, 0317, 0319, 0326, 0354, 0363, 0368, 0369, 0370, 0377, 0381, 0383, 0384, 0387, 0389, 0398, 0606, 0607, 0609, 1154, 0565, 1270, 1287, 3077, 3087. ----- Note ----- 845017 Carburetor (Used After Code Date 10010700) Used on Type No(s). 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0130, 0146, 0148, 0153, 0160, 0167, 0168, 0173, 0180, 0183, 0191, 0206, 0208, 0210, 0213, 0238, 0247, 0251. 0253, 0267, 0284, 0290, 0337, 0373, 0374, 0385, 0405, 0600, 0601.	125G	845015	Carburetor Used on Type No(s). 0001, 0007, 0114, 0115, 0117, 0118, 0123, 0135, 0139, 0140, 0145, 0157, 0158, 0159, 0160, 0161, 0163, 0169, 0172, 0174, 0177, 0178, 0259, 0263, 0264, 0303, 0310, 0322, 0348, 0365, 0367, 0375, 0380, 0386, 0402, 3079, 3285. ----- Note ----- 845248 Carburetor Used on Type No(s). 0364, 0404.	142	690725	Nozzle-Carburetor (Standard) Used on Type No(s). 0162, 0200.
			125J	845841	Carburetor Used on Type No(s). 0395.	142A	806128	Nozzle-Carburetor (Standard)
			127	690727	Plug-Welch			
			130	690726	Valve-Throttle Used on Type No(s). 0162, 0200, 0307.			
			130C	806132	Valve-Throttle			
			132A	690863	Stop-Throttle ----- Note ----- 692155 Stop-Throttle Used on Type No(s). 0161.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
146	691639	Key-Timing	161C	844929	Base-Air Cleaner (Metal) Used on Type No(s). 0001, 0004, 0005, 0075, 0077, 0078, 0087, 0115, 0118, 0121, 0123, 0124, 0129, 0133, 0135, 0140, 0141, 0142, 0145, 0149, 0150, 0154, 0155, 0157, 0159, 0162, 0163, 0164, 0165, 0169, 0171, 0174, 0177, 0178, 0181, 0189, 0194, 0195, 0197, 0199, 0208, 0214, 0243, 0259, 0264, 0367, 0270, 0292, 0295, 0305, 0307, 0319, 0365, 0369, 0375, 0386, 0606, 0607, 1154. ----- Note ----- 845142 Base-Air Cleaner Used on Type No(s). 0006, 0173, 0261, 0303, 0316, 0322, 0345, 0348, 0350, 0360, 0368, 0378, 0380, 0383, 0395, 0402, 0609, 1270, 3077, 3079, 3087, 3285.			0117, 0118, 0121, 0122, 0123, 0124, 0125, 0127, 0128, 0129, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0148, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0162, 0163, 0164, 0165, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0180, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0208, 0213, 0214, 0243, 0247, 0248, 0257, 0259, 0261, 0263, 0264, 0270, 0279, 0287, 0292, 0298, 0303, 0304, 0305, 0307, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0345, 0348, 0350, 0354, 0360, 0363, 0364, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0378, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0389, 0395, 0398, 0402, 0405, 0565, 0600, 0601, 0606, 0607, 0609, 1154, 1270, 1287, 3077, 3087, 3285.
151	841185	Stud (Exhaust Manifold)	161D	845088	Base-Air Cleaner (Metal)	163C	841823	Gasket-Air Cleaner
161	691561	Base-Air Cleaner (Metal)	161E	844994	Base-Air Cleaner Used on Type No(s). 0114, 0117, 0139, 0158, 0161, 0172, 0263, 0310. ----- Note ----- 845600 Base-Air Cleaner Used on Type No(s). 0001.	163D	844143	Gasket-Air Cleaner
161A	842830	Base-Air Cleaner (Metal) Used on Type No(s). 0114, 0117, 0139, 0156, 0158, 0161, 0172, 0220.				165	693148	Nut (Ring Gear)
161B	808414	Base-Air Cleaner (Metal) Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218, 0224, 0229.	161F	844996	Base-Air Cleaner			
			163A	692081	Gasket-Air Cleaner			
			163B	844931	Gasket-Air Cleaner Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115,			

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
182E	841601	Bracket-Fuel Tank	187A	791744	Line-Fuel (Cut To Required Length)	187F	844560	Line-Fuel Used on Type No(s). 0007, 0122, 0127, 0128, 0130, 0186, 0224, 0229, 0248, 0257, 0279, 0287, 0288, 0298, 0299, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0398, 0565, 1279.
182F	691520	Bracket-Fuel Tank			Used on Type No(s). 0007, 0122, 0125, 0127, 0128, 0129, 0130, 0159, 0161, 0179, 0208, 0279, 0303, 0304, 0307, 0311, 0312, 0316, 0317, 0326, 0354, 0363, 0364, 0370, 0373, 0374, 0377, 0378, 0381, 0384, 0385, 0387, 0389, 0565, 1287.	188	692056	Screw (Control Bracket) (14mm Bracket)
182G	841600	Bracket-Fuel Tank	187C	692106	Line-Fuel Used on Type No(s). 0007, 0122, 0125, 0127, 0128, 0130, 0224, 0229, 0248, 0257, 0287, 0288, 0298, 0299, 0311, 0312, 0326, 0363, 0370, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0565, 1279.	190	692199	Screw (Fuel Tank)
182H	691524	Bracket-Fuel Tank				192	807623	Adjuster-Rocker Arm
182J	691525	Bracket-Fuel Tank	187D	844556	Line-Fuel Used on Type No(s). 0007, 0122, 0127, 0128, 0130, 0186, 0224, 0229, 0248, 0257, 0279, 0287, 0288, 0298, 0299, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0565, 1279, 1287.	197	807163	Screw (Back Plate)
186	844032	Connector-Hose				203	690923	Crank-Bell
186A	845121	Connector-Hose Used on Type No(s). 0006, 0261, 0300, 0303, 0305, 0307, 0314, 0316, 0318, 0320, 0327, 0345, 0348, 0350, 0356, 0359, 0364, 0368, 0378, 0380, 0383, 0395, 0402, 0602, 0609, 1270, 1338, 2308, 3077, 3079, 3285.				203A	808753	Crank-Bell Used on Type No(s). 0364.
186B	845141	Connector-Hose Used on Type No(s). 0001, 0006, 0261, 0303, 0305, 0316, 0319, 0322, 0345, 0348, 0350, 0360, 0364, 0368, 0378, 0380, 0383, 0395, 0402, 0609, 1270, 3077, 3079, 3087, 3285.				205	692083	Screw (Bell Crank)
186C	693184	Connector-Hose				206	691244	Nut-Governor Adjusting
187	791766	Line-Fuel (Cut To Required Length)				208	808453	Rod-Governor Control
						208A	844796	Rod-Governor Control Used on Type No(s). 0006, 0348.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	692070	Spring-Governor (Main) ----- Note ----- 692071 Spring-Governor (White) Used on Type No(s). 0117, 0118, 0135, 0140, 0161, 0179, 0263, 0304, 0380, 0402. 691506 Spring-Governor (Yellow) Used on Type No(s). 0006, 0078, 0141, 0152, 0154, 0194, 0219, 0319. 691508 Spring-Governor (Blue) Used on Type No(s). 0001, 0147, 0156, 0158, 0172, 0179, 0201, 0247, 0279, 0310, 0364, 0404, 0405, 1279. 690716 Spring-Governor (Green) Used on Type No(s). 0133, 0142, 0189, 0243, 0303, 0316, 0317, 0365, 0609, 1415. 691507 Spring-Governor (Brown) Used on Type No(s). 0154, 0165, 0199, 0224, 0266, 0292, 0326, 1154. 805630 Spring-Governor Used on Type No(s). 0173. 806507 Spring-Governor (Black) Used on Type No(s). 0165, 0217. 806872 Spring-Governor (Orange) Used on Type No(s). 0162, 0200, 0280, 0307.	209A	690709	Spring-Governor Used on Type No(s). 0004, 0121, 0122, 0126, 0128, 0202, 0203. ----- Note ----- 690710 Spring-Governor Used on Type No(s). 0216, 0259, 0361. 210 691370 Strainer-Fuel 210A 845270 Strainer-Fuel Used on Type No(s). 0007, 0224, 0229, 0248, 0257, 0287, 0298, 0299, 0311, 0312, 0317, 0326, 0363, 0370, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0565, 1279. 211 692069 Spring-Governed Idle (Red) ----- Note ----- 692068 Spring-Governed Idle (Red) Used on Type No(s). 0006, 0078, 0141, 0152, 0159, 0162, 0173, 0179, 0189, 0194, 0219, 0319. 691505 Spring-Governed Idle (White) Used on Type No(s). 0133, 0135, 0142, 0164, 0217, 0266, 0292, 0365, 0609, 1415. 691553 Spring-Governed Idle (Green) Used on Type No(s). 0165. 806868 Spring-Governed Idle (Blue) Used on Type No(s). 0162, 0200, 0280, 0307.	211A	690707	Spring-Governed Idle (White) Used on Type No(s). 0004, 0121, 0122, 0126, 0128, 202, 0203. 212 690712 Link-Throttle 212A 691519 Link-Throttle 215 841183 Cover-Cylinder Head (Cylinder 1) 215A 841316 Cover-Cylinder Head (Cylinder 2) Used on Type No(s). 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 1154, 3285. 215B 841317 Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 1154, 3285. 215F 841182 Cover-Cylinder Head (Cylinder 2) 216 690705 Link-Choke 217 806862 Spring-Choke Return 222 845305 Bracket-Control 226 692075 Rod-Hand Choke 227 690236 Lever-Governor Control ----- Note ----- 845484 Lever-Governor Control Used on Type No(s). 0078, 0121, 0122, 0126, 0128, 0141, 0173, 0194, 0208, 0214. 227A 844799 Lever-Governor Control Used on Type No(s). 0006, 0348. 231 690718 Screw (Choke Valve) 232 692073 Spring-Governor Link 232A 845816 Spring-Governor Link Used on Type No(s). 0395.

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
234	691723	Clip-Control Rod	255	690721	Bushing-Choke Shaft	265	691024	Clamp-Casing
239	690233	Switch-Oil Pressure	262	692083	Screw	267	692083	Screw
		----- Note -----			(Rod Bracket)			(Casing Clamp)
		491657s Switch-Oil Pressure			----- Note -----			----- Note -----
		Used on Type No(s).			841552 Screw			841552 Screw
		0066, 0135, 0142,			(Rod Bracket)			(Casing Clamp)
		0145, 0191, 0217,			Used on Type No(s).			Used on Type No(s).
		0194.			0001, 0004, 0007,			0001, 0007, 0065,
		841281 Switch-Oil Pressure			0065, 0066, 0075,			0066, 0075, 0077,
		Used on Type No(s).			0087, 0096, 0118,			0078, 0087, 0096,
		0001, 0126-B1,			0119, 0122, 0123,			0114, 0117, 0121,
		0126-G1, 0208.			0124, 0125, 0127,			0123, 0124, 0125,
		697049 Switch-Oil Pressure			0130, 0140, 0141,			0126, 0127, 0128,
		Used on Type No(s).			0142, 0145, 0155,			0129, 0130, 0133,
		0259, 0361.			0164, 0169, 0171,			0135, 0139, 0140,
240	844545	Filter-Fuel			0178, 0180, 0181,			0142, 0145, 0147,
		Used on Type No(s).			0183, 0191, 0194,			0148, 0178, 0149,
		0007, 0122, 0127,			0195, 0197, 0214,			0150, 0154, 0155,
		0128, 0130, 0186,			0248, 0263, 0292,			0157, 0158, 0159,
		0224, 0229, 0248,			0303, 0305, 0322,			0160, 0162, 0163,
		0257, 0279, 0287,			0354, 0367, 0369,			0165, 0168, 0169,
		0288, 0298, 0299,			0370, 0373, 0374,			0171, 0172, 0173,
		0311, 0312, 0317,			0375, 0384, 0389,			0174, 0177, 0178,
		0326, 0354, 0363,			0398, 0606, 0607,			0179, 0180, 0181,
		0370, 0373, 0374,			0609, 0565, 1270,			0183, 0186, 0189,
		0377, 0381, 0384,			3077, 3079, 3087.			0191, 0195, 0197,
		0385, 0387, 0389,						0199, 0208, 0229,
		0398, 0565, 1279,						0247, 0257, 0259,
		1287.						0270, 0292, 0298,
240A	691035	Filter-Fuel						0305, 0307, 0310,
240B	808116s	Filter-Fuel						0311, 0312, 0316,
		Used on Type No(s).						0317, 0319, 0322,
		0122, 0125, 0128,						0326, 0348, 0354,
		0130, 0218.						0363, 0364, 0365,
240C	845125	Filter-Fuel						0367, 0369, 0370,
		Used on Type No(s).						0373, 0374, 0375,
		0001, 0004, 0147,						0377, 0380, 0381,
		0380, 0386, 0405,						0383, 0384, 0385,
		0606, 0607, 0609,						0386, 0387, 0389,
		1154.						0398, 0402, 0404,
								0565, 0600, 0601,
								0606, 1154, 1270,
								1287, 3077, 3079,
								3087, 3285.
						268	691025	Casing-Control Wire
						269	691026	Wire-Control
						270	691027	Nut
								(Control Wire Casing)
						271	692541	Lever-Control
						271A	692105	Lever-Control
						271B	691028	Lever-Control
						273	690681	Seal-O Ring
								(Oil Pump)
						276	690724	Washer-Sealing
						276A	807085	Washer-Sealing
								(Head)(Rocker Cover)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276B	806137	Washer-Sealing (Solenoid)	300L	808380	Muffler	309E	844717	Motor-Starter Used on Type No(s).
276C	690704	Washer-Sealing	304	844153	Housing-Blower			0001, 0004, 0005,
278	842122	Washer (Governor Control Lever)	304C	842742	Housing-Blower Used on Type No(s).			0007, 0009, 0066,
					0001, 0152, 0158,			0075, 0077, 0078,
280	691526	Bracket-Rod			0161, 0164, 0166,			0087, 0096, 0114,
281	690742	Panel-Control			0167, 0169, 0202,			0115, 0118, 0121,
282	692083	Screw (Control Lever)			0215, 0331, 0375,			0122, 0123, 0124,
					3077, 3087.			0125, 0130, 0133,
287	692062	Screw (Dipstick Tube)	305	692056	Screw (Blower Housing) (14mm)			0135, 0139, 0140,
290	809911	Screw (Adapter-Air Cleaner)	305A	841233	Screw (Blower Housing) (M6 X 10)			0141, 0142, 0145,
300B	498984s	Muffler Used on Type No(s).						0149, 0150, 0154,
		0001, 0158, 0201.	309	691564	Motor-Starter (Steel Ring Gear Only)			0157, 0158, 0159,
300D	692099	Muffler Used on Type No(s).	309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)			0160, 0163, 0164,
		0006, 0066, 0141,						0165, 0169, 0171,
		0142, 0145, 0147,	309B	808817	Motor-Starter Used on Type No(s).			0172, 0173, 0174,
		0148, 0149, 0150,			0116, 0155, 0166,			0177, 0178, 0181,
		0152, 0181, 0186,			0167, 0183, 0175,			0189, 0191, 0194,
		0191, 0202, 0214,			0404.			0195, 0197, 0199,
		0219, 0224, 0243,						0208, 0213, 0214,
		0247, 0311, 0312,						0243, 0247, 0259,
		0319, 0363, 0369,						0264, 0270, 0279,
		0381, 0386, 0387,						0292, 0303, 0305,
		0395, 0405, 0600,						0310, 0311, 0312,
		0601, 0609.						0316, 0317, 0319,
300E	690906	Muffler						0322, 0348, 0364,
300F	690931	Muffler (Hi Mount) (Starter Side Exit) Used on Type No(s).						0365, 0367, 0368,
		0129, 0154, 0199,						0373, 0374, 0375,
		1154.						00377, 0380, 0381,
300G	691562	Muffler Used on Type No(s).						0383, 0387, 0389,
		0133, 0172, 0206,						0395, 0398, 0402,
		0257, 0354, 0384,						0606, 0607, 0609,
		1270.						1154, 1270, 3285.
		----- Note -----				310		Screw (Starter Motor) (For Replacement Armature, Order Reference 309)
	692464	Muffler Used on Type No(s).				310A	690323	Screw (Starter Motor)
		0161, 0322, 0367.				311A	497608	Brush Set
300K	808379	Muffler Used on Type No(s).				311B	825411	Brush Set
		0133, 0364, 1270.				318	690932	Screw (Mounting Bracket)
						320	1726829SM	Relay (Single Pole, Double Throw)
						322	841233	Screw (Cylinder Head Cover)

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
322A	692067	Screw (Cylinder Head Cover) Used on Type No(s). 0124, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 1154.	347	691995	Switch-Rocker	436A	691499	Manifold-Exhaust (Lo Mount) (Starter Motor Side) Used on Type No(s). 0186, 0224, 0229, 0363, 0369.
332	690887	Nut (Flywheel)	349	690238	Nut (Cylinder Head Cover)	436B	691501	Manifold-Exhaust
333	844548	Armature-Magneto	355	690944	Washer	436C	691502	Manifold-Exhaust (Cylinder 1) (Side Outlet) Used on Type No(s). 0001, 0158, 0201.
334	692066	Screw (Magneto Armature)	356	690796	Wire-Stop (Control Panel)	436D	805609	Manifold-Exhaust (Side Outlet) Used on Type No(s). 0213, 0298, 0299, 0565, 1287.
337	491055s	Plug-Spark ----- Note ----- 792015 Plug-Spark Used on Type No(s). 0001, 0004, 0005, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0079, 0087, 0096, 0119, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0135, 0139, 0141, 0142, 0145, 0152, 0154, 0155, 0156, 0157, 0158, 0162, 0163, 0168, 0171, 0177, 0178, 0183, 0186, 0194, 0197, 0199, 0201, 0202, 0206, 0215, 0243, 0247, 0257, 0263, 0287, 0292, 0298, 0305, 0310, 0322, 0326, 0354, 0363, 0364, 0365, 0367, 0373, 0374, 0375, 0368, 0369, 0370, 0377, 0383, 0384, 0385, 0386, 0389, 0398, 0404, 0565, 0600, 0601, 0606, 0607, 1154, 1415 3077, 3079, 3087, 3285. 496018S Plug-Spark Used on Type No(s). 0162, 0179, 0200, 0280, 0304, 0307. 691043 Plug-Spark Used on Type No(s). 0172, 0186, 0189, 0345.	363	19203	Puller-Flywheel	437	691902	Screw (Exhaust Manifold)
			365	690711	Screw (Carburetor)	439	692154	Seal-O Ring (Crankcase Cover/Sump)
			373	691612	Nut (Ground Terminal)	445	394018s	Filter-Air Cleaner Cartridge ----- Note ----- 692519 Filter-Air Cleaner Cartridge Used on Type No(s). 0220.
			377	808095	Key-Woodruff			
			383	19576s	Wrench-Spark Plug			
			385	807084	Screw (Fuel Pump)			
			387	808656	Pump-Fuel ----- Note ----- 844642 Pump-Fuel Used on Type No(s). 0162, 0179, 0200, 0241, 0280, 0286, 0304, 0307, 0340, 0360, 0398, 0566, 0596.			
			388	820799	Lever-Pinion Drive			
			400	808657	Cooler-Oil			
			401	845814	Link-Actuator			
			402	690679	Screw (Cover-Oil Filter)			
			413	693587	Nut (Starter Motor)			
			415	794903	Plug			
			417	810074	Screw (Oil Cooler)			
			432	691509	Cap-Spring			
346	690661	Screw (Spark Arrestor)	436	692061	Manifold-Exhaust (Lo Mount) (Oil Filter Side) Used on Type No(s). 0006, 0066, 0135, 0141, 0142, 0145, 0147, 0148, 0149, 0150, 0152, 0173, 0181, 0191, 0202, 0214, 0217, 0219, 0247, 0266, 0311, 0319, 0312, 0381, 0395, 0405, 0600, 0601, 0609, 1415.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445B	393957s	Filter-Air Cleaner Cartridge Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0191, 0206. ----- Note ----- 845090 Filter-Air Cleaner Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0147, 0148, 0160, 0168, 0180, 0183, 0186, 0191, 0213, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0298, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0405, 0565, 0600, 0601, 1287.	467A	691668	Knob-Air Cleaner Cover	501A	794360	Regulator (5 To 9 Amp Regulated) Used on Type No(s). 0148, 0153, 0213, 0311, 0312, 0387, 0398.
			468	690690	Seal-O Ring (Oil Pump Screen)			
			474B	696578	Alternator (DC Only) Used on Type No(s). 0264, 0270, 0299, 1270.	501B	691573	Regulator (20 Amp) ----- Note ----- 808877 Regulator Used on Type No(s). 0145. 841170 Regulator (20 Amp) Used on Type No(s). 0130, 0165, 0207, 0292, 0374, 1415.
			474C	696457	Alternator (9 Amp Regulated) Used on Type No(s). 0148, 0153, 0213, 0311, 0312, 0387, 0398.			
			474D	696458	Alternator (10-16 Amp Regulated)	503	691532	Strap-Starter
			474E	696579	Alternator	503A	845016	Strap-Starter
			474F	841588	Alternator (20 Amp) ----- Note ----- 841178 Alternator Used on Type No(s). 0130, 0165, 0207, 0374, 1415. 841833 Alternator (20 Amp) Used on Type No(s). 0066.	505	690238	Nut (Governor Control Lever)
445C	841497	Filter-Air Cleaner Cartridge ----- Note ----- 820263 Filter-Air Cleaner Cartridge Used on Type No(s). 0404.	479	807084	Screw (Oil Pump Screen) ----- Note ----- 692537 Screw (Oil Pump Screen) Used on Type No(s). 0115, 0149, 0150, 0174.	506	807120	Screw (Carburetor Cover)
445D	821136	Filter-Air Cleaner Cartridge	480	806660	Screw (Hose-Purge Line) (M8 X 18)	507	691972	Insulator
447	841233	Screw (Air Guide Cover)	493	691518	Bracket-Mounting	510	496881	Drive-Starter
448	841488	Bracket-Oil Cooler	500	691086	Washer (Key Switch)	515	691528	Spring-Pawl
454	693289	Cap-Breather	501	845907	Regulator (16 Amp Regulated) ----- Note ----- 493219 Regulator Used on Type No(s). 0123, 0124, 0125, 0129, 0177, 0216, 0373.	520	691084	Terminal-Ground
455	841794	Cup-Flywheel				523	693175	Dipstick
456	845219	Plate-Pawl Friction				524	693172	Seal-Dipstick Tube
459	845218	Pawl-Ratchet				525	693174	Tube-Dipstick (Standard)
460	806667	Connector-Filter Adapter				525A	693173	Tube-Dipstick Used on Type No(s). 0005, 0263, 0310, 3285.
466	806466	Seal-O Ring (Breather Assembly)				526	692067	Screw (Regulator)(10-16 Amp Regulated)
467	844618	Knob-Air Cleaner (Used After Code Date 1003310). ----- Note ----- 691985 Knob-Air Cleaner (Used Before Code Date 10040100).				526A	690717	Screw (Regulator)(5 To 9 Amp Regulated) Used on Type No(s). 0148, 0153, 0213, 0311, 0312, 0387, 0398.
						526B	691547	Screw (Regulator)(20 Amp)
						527	690423	Clamp-Tube
						529	690744	Grommet

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
529A	691527	Grommet	578A	844547	Wire Assembly	613A	692067	Screw
532	691115	Nut			----- Note -----			(Muffler)
		(Mounting Bracket)			692319 Wire-			Used on Type No(s).
536	809670	Cleaner-Air			Assembly			0006, 0066, 0141,
544		Armature-Starter			Used on Type No(s).			0142, 0145, 0147,
		(For Replacement			0005.			0148, 0149, 0150,
		Armature, Order	578B	690809	Wire-Assembly			0152, 0181, 0186,
		Reference 309)	578C	692961	Wire-Assembly			0191, 0202, 0214,
544A		Armature-Starter	578D	691999	Wire-Assembly			0219, 0224, 0243,
		(Service With 691564	578E	845849	Wire-Assembly			0247, 0266, 0311,
		Starter Motor Only)			Used on Type No(s).			0319, 0363, 0369,
552	690701	Bushing-Governor			0395.			0381, 0386, 0387,
		Crank	582	809878	Clamp-Air Cleaner			0395, 0405, 0600,
		(Output End)			----- Note -----			0601, 0609.
552A	806686	Bushing-Governor			807381 Clamp-Air	614	691550	Retainer-Governor
		Crank			Cleaner			Shaft
561	690713	Nut			Used on Type No(s).	616	806685	Crank-Governor
		(Control Lever)			0404.	620	494052	Panel-Speed Control
562	690239	Bolt	587	807116	Clamp-Cable	628	806660	Screw
		(Governor Control	592	690939	Nut			(Fuel Pump Bracket)
		Lever)			(Rewind Starter) (M6)	628A	692062	Screw
563	841735	Screw	596	691492	Screw			(Fuel Pump Bracket)
		(Debris Screen Guard)			(Oil Pump)			Used on Type No(s).
564	690677	Screw	598	807625	Shim-End Play			0162, 0179, 0200,
		(Control Cover)			(Crankshaft or			0307.
565	690682	Stud			Camshaft Bearing)	629	806717	Spring-Throttle Return
		(Oil Filter Adapter)	601	691038	Clamp-Hose	629A	806716	Spring-Throttle Return
572	690686	Baffle-Breather	601A	691522	Clamp-Hose	633	690722	Seal-Choke/Throttle
573	841310	Plate-Back	601B	791850	Clamp-Hose			Shaft
		----- Note -----	601D	841597	Clamp-Hose	633A	806131	Seal-Choke/Throttle
		841311 Plate-Back			(Oil Hose)			Shaft
		Used on Type No(s).	604	845821	Cover-Control	635	692076	Boot-Spark Plug
		0116, 0166, 0167,	608	841729	Starter-Rewind			
		0175.	613	691902	Screw	638	691551	Washer
		841127 Plate-Back			(Muffler)			(Cylinder Cover)
		Used on Type No(s).			----- Note -----			(Internal Tooth
		0155, 0183, 0364,			692328 Screw			Lockwasher)
		0404.			(Muffler)			(Used Before Code
		841314 Plate-Back			Used on Type No(s).			Date 03110100).
		Used on Type No(s).			0154.			
		0130, 0165, 0374,						
		1415.						
577	690795	Cable-Starter						
578	692306	Wire Assembly						
		(1 Wire, 48-1/2" Long)						
		(Snap Connect Female						
		Pin Socket, And Bare						
		Wire End)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
638A	690706	Washer (Cylinder Head Cover)(Internal Tooth Lock-washer) Used on Type No(s). 0124, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 1154.	643C	845087	Retainer-Air Filter Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0130, 0147, 0148, 0180, 0183, 0186, 0191, 0213, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0298, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0405, 0565, 0600, 0601, 1287.	689	691272	Spring-Friction
643	692079	Retainer-Air Filter				691	842826	Seal-Governor Shaft
643A	690447	Retainer-Air Filter Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218, 0298, 0565.				697	692062	Screw (Drive Cap)
643B	844932	Retainer-Air Filter Used on Type No(s). 0001, 0004, 0005, 0006, 0075, 0077, 0078, 0087, 0114, 0115, 0117, 0118, 0121, 0123, 0124, 0129, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0161, 0162, 0163, 0164, 0165, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0181, 0189, 0194, 0195, 0197, 0199, 0208, 0214, 0243, 0259, 0261, 0263, 0264, 0270, 0292, 0303, 0305, 0307, 0310, 0316, 0319, 0322, 0345, 0348, 0350, 0360, 0365, 0367, 0368, 0369, 0375, 0378, 0380, 0383, 0386, 0395, 0402, 0606, 0607, 0609, 1154, 1270, 3077, 3079, 3087, 3285.	650	841233	Screw (Oil Deflector)	703	691010	Clip
			664	691087	Nut (Key Switch)	710	807689	Cover-Oil Filter
			668A	691500	Spacer	711	841233	Screw (Carburetor Shield)
			668B	691215	Spacer	717	692153	Bracket-Air Cleaner
			674	692056	Screw (Fuel Tank Bracket) (M8 X 14)	717A	841886	Bracket-Air Cleaner Used on Type No(s). 0364.
			674B	692062	Screw (Fuel Tank Bracket) (M8 X 18)	718	806469	Pin-Locating
			676	795036	Deflector-Muffler	718B	841581	Pin-Locating (Used After Code Date 04021500).
			676A	795038	Deflector-Muffler Used on Type No(s). 0006, 0147, 0162, 0200, 0280, 0307, 0405.	----- Note -----		
			676B	396903	Deflector-Muffler Used on Type No(s). 0207.	723	845818	Seal-Foam
			676C	495518	Deflector-Muffler	725A	805702	Shield-Heat
			677	810079	Screw (Muffler Deflector)	725B	691498	Shield-Heat
			677B	690661	Screw (Muffler Deflector)	725C	806102	Shield-Heat
			678	841730	Spacer-Rewind	726		Gear-Ring (Steel)(See Reference 23 for Service)
			683	691029	Nut (Starter Solenoid)	727	841313	Cover-Starter Drive
			683A	820809	Nut (Starter Solenoid)	728	691514	Screw (Heat Shield)
						728B	692067	Screw (Heat Shield)
						729	690586	Clip-Wire
						732	690688	Screw (Starter Drive Cover)
						732A	841233	Screw (Starter Drive Cover)
						737	690679	Screw (Oil Filter Adapter)
						741	691530	Gear-Timing
						773		Retainer (For Replacement Starter Motor, Order Reference 309B)
						774	692067	Screw (Stop Wire)

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
788	691559	Bracket-Fuel Pump ----- Note ----- 844643 Bracket-Fuel Pump Used on Type No(s). 0162, 0179, 0200, 0241, 0280, 0286, 0304, 0307, 0340, 0360, 0398, 0566, 0596.	803		Housing-Starter (For Replacement Armature, Order Reference 309)	833B	691593	Screw (Air Cleaner Mounting Strap/Stud) (M6x12mm) Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0130, 0147, 0148, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0213, 0218, 0224, 0247, 0248, 0257, 0279, 0287, 0229, 0298, 0311, 0312, 0317, 0326, 0354, 0363, 0364, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0405, 0565, 0600, 0601, 1287.
789	691996	Harness-Wiring ----- Note ----- 841318 Harness-Wiring Used on Type No(s). 0155, 0183. 842744 Harness-Wiring Used on Type No(s). 0166, 0167. 691578 Harness-Wiring Used on Type No(s). 0009, 0142, 0195, 0217, 0259, 0270, 0368, 0377, 0383, 0389, 0609, 1270. 845850 Harness-Wiring Used on Type No(s). 0395.	803A		Housing-Starter (For Replacement Armature, Order Reference 309)			
			803B		Housing-Starter (For Replacement Armature, Order Reference 309)			
			803C	820783	Housing-Starter			
			804	844727	Canister-Carbon Used on Type No(s). 0007, 0224, 0229, 0248, 0257, 0287, 0298, 0299, 0311, 0312, 0317, 0326, 0363, 0370, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0565, 1279.			
			807	805557	Spacer-Throttle	836	691514	Screw (Muffler Guard)
			813	690635	Clamp	836A	692067	Screw (Muffler Guard)
			816	690706	Washer (Oil Filter Adapter)	837	808085	Spacer-Muffler
			819	692056	Screw (Muffler Bracket) (M8 X 14)	843	691322	Sleeve-Lever
			819A	690943	Screw (Muffler Bracket) (M8 X 16)	849	691088	Screw (Stub Shaft)
789B	844549	Wire Assembly Used on Type No(s). 0005, 0009, 0115, 0116, 0149, 0150, 0174, 0175, 0264.	819D	692062	Screw (Muffler Bracket) (M8 X 18)	855	845586	Adapter-Air Cleaner Used on Type No(s). 0304.
789C	844798	Wire Assembly Used on Type No(s). 0006, 0259, 0348.	829	841999	Hose-Oil			
789D	845788	Wire Assembly Used on Type No(s). 0395.	830	809157	Stud-Rocker Arm			
			832	691571	Guard-Muffler			
			833	841233	Screw (Air Cleaner Mounting Strap/Stud)			
797	691029	Nut (Brush Retainer)						
797A	693167	Nut (Brush Retainer)						
801		Cap-Drive (For Replacement Armature, Order Reference 309)						
801B	691283	Cap-Drive						
802A	691286	Cap-End						
802C		Cap-End (For Replacement Starter Motor, Order Reference 309B)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-36 Assemblies include all parts shown in frames. 11/30/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
862D	691565	Strap/Stud-Air Cleaner Mounting Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0147, 0148, 0153, 0167, 0168, 0183, 0191, 0218. ----- Note ----- 845089 Strap/Stud-Air Cleaner Mounting Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0160, 0168, 0180, 0183, 0186, 0191, 0213, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0298, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0405, 0565, 0600, 0601, 1287.			And Insulated Snap Connect Male Pin Terminal)	879A	842132	Cover-Carburetor (Used After Code Date 04093000). Used on Type No(s). 0006, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0130, 0160, 0180, 0186, 0206, 0218, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0290, 0298, 0311, 0316, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0565, 0600, 0601, 1287. ----- Note ----- 842132 Cover-Carburetor Used on Type No(s). 0007, 0146, 0147, 0148, 0153, 0168, 0183, 0191, 0208, 0213, 0312, 0389, 0398, 0405, 1270.
863	691513	Bracket-Muffler ----- Note ----- 690756 Bracket-Muffler Used on Type No(s). 0186, 0224, 0363, 0369.	877B	393537	Wire/Connector-Alternator	879B	842269	Cover-Carburetor Used on Type No(s). 0001, 0114, 0117, 0139, 0156, 0158, 0161, 0172, 0220, 0263, 0310, .
865	843768	Cover-Air Guide (Black)	877C	399916	Wire/Connector-Alternator (2 Wires, 7-53/64" Long)(2 Bare Wire Ends, And Insulated Snap Connect Male Pin Terminal)	883	691613	Gasket-Exhaust
865A	841319	Cover-Air Guide (Aluminum) Used on Type No(s). 0124, 0129, 0154, 0155, 0157, 0158, 0159, 0179, 0199, 1154. ----- Note ----- 841231 Cover-Air Guide (Aluminum) Used on Type No(s). 3285.	877D	698092	Wire/Connector-Alternator	884	690898	Clamp-Muffler
868	691963	Seal-Valve	878	691362	Harness-Alternator	884A	691956	Clamp-Muffler
871	692057	Bushing-Valve Guide	879	841607	Cover-Carburetor ----- Note ----- 842129 Cover-Carburetor (Used Before Code Date 04100100). Used on Type No(s). 0065, 0119, 0126, 0127, 0128, 0369, 0385. 842128 Cover-Carburetor (Used Before Code Date 04100100). Used on Type No(s). 0009, 0066, 0096, 0122, 0125, 0367, 0368, 0375. 842128 Cover-Carburetor Used on Type No(s). 0001, 0004, 0005, 0075, 0077, 0078, 0079, 0087, 0121, 0123, 0133, 0141, 0142, 0145, 0149, 0150, 0152, 0155, 0157, 0166, 0169, 0173, 0181, 0194, 0195, 0197, 0202, 0203, 0207, 0214, 0215, 0216, 0217, 0219, 0259, 0270, 0283, 0319, 0322, 0383, 0395, 0606, 0607, 0609, 3077, 3079, 3087.	892	692318	Switch-Key
877A	399916	Wire/Connector-Alternator (2 Wires, 7-53/64" Long) (2 Bare Wire Ends,				893	820805	Nut (Starter Solenoid)
						899	691077	Washer (Starter Solenoid)
						914	807120	Screw (Rocker Cover)
						915	691493	Liner-Port
						918	791880	Hose-Vacuum (Cut To Required Length)

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
920	691656	Solenoid-Starter	947A	692094	Solenoid-Fuel	968	699959	Cover-Air Cleaner
920A	825418	Solenoid-Starter	953	845030	Screen-Air Cleaner	968A	844559	Cover-Air Cleaner
920B	557067	Solenoid-Starter Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0066, 0075, 0077, 0078, 0087, 0096, 0115, 0121, 0122, 0123, 0125, 0130, 0133, 0135, 0141, 0142, 0145, 0148, 0149, 0150, 0160, 0165, 0168, 0169, 0171, 0174, 0177, 0178, 0180, 0181, 0189, 0191, 0194, 0195, 0197, 0213, 0214, 0243, 0247, 0264, 0270, 0279, 0290, 0292, 0303, 0305, 0311, 0312, 0316, 0317, 0319, 0322, 0365, 0367, 0368, 0373, 0374, 0375, 0377, 0381, 0383, 0387, 0389, 0395, 0398, 0606, 0607, 0609, 1270. ----- Note ----- 845269 Solenoid -Starter Used on Type No(s). 0259, 0262, 0314, 0318, 0361.	955A	807723	Plug-Carburetor	968B	841822	Cover-Air Cleaner
			957	795027	Cap-Fuel Tank	968C	842621	Cover-Air Cleaner ----- Note ----- 842620 Cover-Air Cleaner Used on Type No(s). 0404.
			957B	844728	Cap-Fuel Tank (Plastic) Used on Type No(s). 0007, 0224, 0229, 0248, 0257, 0287, 0298, 0299, 0311, 0312, 0317, 0326, 0363, 0370, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0565, 1279.	971	807084	Screw (Air Cleaner Base to Carburetor) (M6x14mm)
			958	692008	Valve-Fuel Shut Off (Plastic)	972A	845137	Tank-Fuel (Plastic)
			964	590799	Cap-Connector	972B	844726	Tank-Fuel Plastic Used on Type No(s). 0007, 0224, 0229, 0248, 0257, 0270, 0287, 0298, 0299, 0311, 0312, 0326, 0363, 0370, 0373, 0374, 0377, 0381, 0385, 0387, 0389, 0565, 1279,
			967	272490s	Filter-Pre Cleaner ----- Note ----- 692520 Filter-Pre Cleaner Used on Type No(s). 0220.	972C	845138	Tank-Fuel Plastic Used on Type No(s). 0122, 0125, 0127, 0128, 0130, 0186, 0224, 0279, 0288, 0354, 0384, 0398, 1287.
			967C	271794s	Filter-Pre Cleaner Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0130, 0147, 0148, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0298, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0384, 0385, 0387, 0389, 0398, 0405, 0565, 0600, 0601, 1287.	972D	844558	Tank-Fuel Plastic ----- Note ----- 844561 Tank-Fuel Plastic Used on Type No(s). 0147, 0404.
927	691116	Screw (Electronic Governor Module) Used on Type No(s). 0005, 0009, 0116, 0117, 0149, 0150.						
930	841490	Guard-Rewind Used on Type No(s). 0001, 0007, 0141, 0158, 0178, 0319.						
934	691058	Screw (Fan Retainer)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
988	692063	Gasket-Oil Adapter	1028	808235	Adapter-Oil Filter			Governor
988A	690687	Gasket-Oil Adapter		----- Note -----		1048A	845556	Module-Electronic Governor
990	691959	Key Set		808537	Adapter-Oil Filter	1051	691124	Ring-Retaining
994	794945	Arrestor-Spark			Used on Type No(s). 0001, 0375.	1054	280275	Tie-Cable
994A	808361	Arrestor-Spark		808033	Adapter-Oil Filter	1058	279771	Operator's Manual
996A	691577	Shield-Carburetor			Used on Type No(s). 0006, 0009, 0066, 0116, 0135, 0141, 0142, 0145, 0149, 0150, 0152, 0173, 0174, 0181, 0191, 0194, 0202, 0208, 0214, 0217, 0219, 0266, 0319, 0377, 0381, 0386, 0389, 0395, 0398.	1059	698516	Kit-Screw/Washer
996B	844930	Shield-Carburetor				1068	845143	Clamp-Hose
1004	842258	Duct-Air						Used on Type No(s). 0299.
1005	841439	Fan-Flywheel	1029	807323	Arm-Rocker	1090	691293	Retainer-Brush
1006	690452	Retainer-Fan	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1090A	496813	Retainer-Brush
1009	806474	Screw (Starter Motor)				1091	691516	Cap-Limiter
1009A	691902	Screw (Starter Motor)				1091A	844448	Cap-Limiter
1012	690592	Retainer-Link						Used on Type No(s). 0001, 0004, 0005, 0006, 0007, 0009, 0065, 0066, 0075, 0077, 0078, 0087, 0096, 0114, 0115, 0117, 0118, 0119, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0130, 0133, 0135, 0139, 0140, 0141, 0142, 0145, 0147, 0149, 0150, 0154, 0155, 0157, 0158, 0159, 0160, 0161, 0163, 0164, 0165, 0168, 0169, 0171, 0172, 0173, 0174, 0177, 0178, 0181, 0183, 0186, 0189, 0191, 0194, 0195, 0197, 0199, 0208, 0213, 0214, 0224, 0229, 0243, 0247, 0248, 0257, 0259, 0263, 0264, 0266, 0270, 0279, 0287, 0292, 0298, 0303, 0304, 0305, 0307, 0310, 0311, 0312, 0316, 0317, 0319, 0322, 0326, 0348, 0354, 0363, 0365, 0367, 0368, 0369, 0370, 0373, 0374, 0375, 0377, 0380, 0381, 0383, 0384, 0385, 0386, 0387, 0395, 0389, 0398, 0402, 0404, 0405, 0565, 0600, 0601, 0606, 0607,
1017	690900	Screen-Oil Pump						
1022	806039s	Gasket-Rocker Cover						
1023B	691494	Cover-Rocker (Used on Type No(s). 0295.						
1023C	690910	Cover-Rocker (Cylinder 1) (With Fuel Pump)						
1023D	691558	Cover-Rocker						
1023E	691531	Cover-Rocker						
1023F	843749	Cover-Rocker (Used on Type No(s). 0295, 0298, 0299, 0565, 1279.						
1023G	842823	Cover-Rocker (Used on Type No(s). 0303, 0316, 0317.						
1023H	843750	Cover-Rocker (Used on Type No(s). 0364.						
1024	843825	Pump-Oil (Used After Code Date 07101400). ----- Note ----- Pump-Oil (Oil Pump Is No Longer Available)(See Reference 18 For Correct Replacement Crankcase Cover). (Used Before Code Date 07101500).						
1025	690689	Spool-Governor						
1026	691836	Rod-Push (Steel) ----- Note ----- 691758 Rod-Push (Exhaust)(Aluminum)						
1027	842921	Filter-Oil (2 1/4" Long)						
			1038	691567	Rod-Fuel Shut Off			
			1038A	844555	Rod-Fuel Shut Off (Used on Type No(s). 0007, 0009, 0065, 0066, 0096, 0122, 0127, 0128, 0130, 0148, 0160, 0168, 0180, 0183, 0186, 0191, 0213, 0224, 0229, 0247, 0248, 0257, 0279, 0287, 0288, 0298, 0299, 0311, 0312, 0317, 0326, 0354, 0363, 0370, 0373, 0374, 0377, 0381, 0385, 0387, 0384, 0389, 0398, 0565, 0600, 0601, 1287.			
			1044	692056	Screw (Flywheel)			
			1046	692082	Plug-Blower Housing			
			1047	841580	Shaft-Stub			
			1047A	844148	Shaft-Stub (Used on Type No(s). 0114, 0115, 0148, 0154, 0172, 0174, 0179, 0199, 0304, 0312, 0386, 0387, 0402, 1154.			
			1048	690669	Module-Electronic			

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0609, 1154, 1270, 1287, 3285.	1392	690939	Nut (Rewind Guard) Used on Type No(s). 0001, 0007, 0141, 0158, 0178, 0319.	1442	844797	Solenoid-Idle Down Used on Type No(s). 0006, 0348.
1095B	841191	Gasket Set-Valve				1455	845813	Lever-Actuator Used on Type No(s). 0395.
1100	791959	Pivot-Rocker Arm	1406	842623	Valve-Debris	1456	845815	Bracket-Stepper Motor Used on Type No(s). 0395.
1119	691552	Screw (Alternator)	1416	807468	Cap-Carburetor	1457	845819	Stepper Motor Used on Type No(s). 0395.
		----- Note -----	1425	844712	Hose-Purge Line (Cut To Required Length) Used on Type No(s). 0001, 0005, 0006, 0075, 0077, 0078, 0087, 0117, 0259, 0261, 0295, 0280, 0303, 0305, 0316, 0319, 0322, 0348, 0350, 0368, 0378, 0380, 0383, 0395, 0402, 0609, 1270, 3285.	1458	845812	Screw (Stepper Motor) Used on Type No(s). 0395.
		841835 Screw (Alternator) Used on Type No(s). 0116, 0166, 0167.				1459	845820	Screw-Set Used on Type No(s). 0395.
1133	690342	Screw (Crankshaft)	1425A	845717	Hose-Purge Line (Cut To Required Length) Used on Type No(s). 0307, 0360, 3077, 3079, 3087, 3285.	1460	845822	Bracket-Governor Control Used on Type No(s). 0395.
1155	806647	Washer (Oil Cooler)				1461	845824	Eng Cntrl Unit (ECU) Used on Type No(s). 0395.
1176	842067	Nut (Exhaust Manifold)	1431	844035	Washer (Hose-Purge Line) Used on Type No(s). 0005, 0075, 0077, 0078, 0087, 0117, 0259, 0295, 0280, 0345.	1462	792629	Screw (ECU) Used on Type No(s). 0395.
1177	845823	Nut (Muffler) (M8)				1463	845825	Kit-Electronic Governor Conversion Used on Type No(s). 0395.
1254	807084	Screw (Rocker Cover Stud)						
1301	845823	Nut (Wire Harness) (#8-32)						
1328	809907	Cap-A/C Rain						
		----- Note -----						
		716241 Cap-A/C Rain Used on Type No(s). 0404.						
1330	272144	Repair Manual						
1344	841129	Cable-Choke						
1346	492031	Valve-Oil Drain Shut Off						
1351	690682	Stud (Cylinder Shield)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

